





Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	AUTO		Smart
	PIP		Shift + Smart
	Exit		Exit
	Go To / Text		Text
	Audio I/II		Dual
	Display		Info
	Sleep		Sleep
	P+		Ch +
	P-		Ch -
	V+		Vol +
	V-		Vol -
	Red / Input		AV
	Red / Input		Shift + Red
	Green / TV		Menu
	Green / TV		Shift + Green

Original	Substitut	Original	Substitut
	Yellow / PMode		Format
	Yellow / PMode		Shift + Yellow
	Blue / SMode		Shift + Dual
	Blue / SMode		Shift + Blue
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8





Original		Substitut		Original		Substitut	
	9		9		I<< / Subpage		I<<
	0		0		>>I / Lang		>>I
	-/-- / +10	+	Shift + Guide		Stop / FAV -		Stop
	Recall / Prog		Back		Stop / FAV -	+	Shift + Left
	Red / D.Setup		Red		<< / FAV		<<
	Red / D.Setup		Options		<< / FAV		Pre Ch
	Green / A-B		Green		>> / FAV+		>>
	Yellow / Angle		Yellow		>> / FAV+	+	Shift + Right
	Blue / Repeat		Blue		Eject / EPG		Eject
	Blue / Repeat	+	Shift + Text		Eject / EPG		Guide
	Subtitle		Subt		Media		Media
	Pause/Play / Hold		Play		Recorder		Rec
	Pause/Play / Hold		Pause		CH.List		List
	Size		3D		TV / Radio		TV/R
	D.Menu / Mix		D. Menu				
	D.Disp / Reveal	+	Shift + Info				
	Zoom / TXT Index	+	Shift + Eject				

