 






















 





 



 














 







 






















 










 

 
Original	Substitut	Original	Substitut
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Vol+	 Vol+
 9	 9	 FAV	 Fav / Marker / PC
 -/--	 Shift + Guide / EPG / -/--	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Recall	 Back / Return	 P.Mode	 Picture / Format
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 S.Mode	 Sound / Title
 Aspect	 Zoom / Size	 Red	 Red / Netflix / Search

Original	Substitut	Original	Substitut
 Power	 Power	 Input	 AV / Input / RDS
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Vol+	 Vol+
 9	 9	 FAV	 Fav / Marker / PC
 -/--	 Shift + Guide / EPG / -/--	 CH+	 CH+ / Page+
 0	 0	 Vol-	 Vol-
 Recall	 Back / Return	 P.Mode	 Picture / Format
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 S.Mode	 Sound / Title
 Aspect	 Zoom / Size	 Red	 Red / Netflix / Search





Original	Substitut
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Home	 Shift + Home / Menu /
 Setup	 Setup / OPT /
 Mouse	 Display / Media
 EPG	 Guide / EPG / -/--
 Text	 Text / Goto
 Stop/Reveal	 Stop / Hold
 Play	 Play / Slow
 Pause/Mix/T	 Pause / Step / Freeze
 Index	 Smart / List
 <</Hold	 << / Tune-
 >>/Subpage	 >> / Tune+
 I<</Size	 I<< / Preset-
 >>I/Cancel	 >>I / Preset+
 Sub-T	 Subtitle / EQ

Original	Substitut
 Rec	 Rec / Rec Mode
 Netflix	 Shift + Red / Netflix /
 You Tube	 Shift + Yellow / YouTube /

