 

 


 

 

 
 
 
 
 
 
 


 
 
 


 


 
 





 

 

 
 
 



 
 
 

 

 
 
 
 
 

 
 



 
 
 
 

 






 
 
 

 
 
 
 

Original	Substitut	Original	Substitut
 Standby/On	 Power	 Prog-	 Ch -
 Input Select	 AV	 Timer/Prog	 Sleep
 HDMI	 D. Menu	 [i+]	 Info
 Open/Close/Eject	 Eject	 Text	 Text
 1	 1	 Variable Skip/→	 Media
 2	 2	 Variable Replay/→	 Smart
 3	 3	 Guide	 Guide
 4	 4	 Top Menu	 Shift + Menu
 5	 5	 Menu/List	 Menu
 6	 6	 Display	 Shift + Info
 7	 7	 Return/Back	 Back
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 Setup	 Options	 Left	 Left
 Clear	 Exit	 Enter/OK	 Ok
 Prog+	 Ch +	 Red	 Red

Original	Substitut	Original	Substitut
 Standby/On	 Power	 Prog-	 Ch -
 Input Select	 AV	 Timer/Prog	 Sleep
 HDMI	 D. Menu	 [i+]	 Info
 Open/Close/Eject	 Eject	 Text	 Text
 1	 1	 Variable Skip/→	 Media
 2	 2	 Variable Replay/→	 Smart
 3	 3	 Guide	 Guide
 4	 4	 Top Menu	 Shift + Menu
 5	 5	 Menu/List	 Menu
 6	 6	 Display	 Shift + Info
 7	 7	 Return/Back	 Back
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 Setup	 Options	 Left	 Left
 Clear	 Exit	 Enter/OK	 Ok
 Prog+	 Ch +	 Red	 Red





Original	Substitut	Original	Substitut
	Green		Green
	Yellow/System		Yellow
	Blue/Search		Blue
	<<		<<
	Play		Play
	>>		>>
	I<<		I<<
	Stop		Stop
	>>I		>>I
	Pause		Pause
	VCR		Shift + 1
	HDD		Shift + 2
	DVD		Shift + 3
	Time Shift		List
	Dubbing		Pre Ch
	Rec Speed		3D
	Rec		Rec

Original	Substitut	Original	Substitut
	Subtitle		Subt
	1.3x/0.8xPlay		Format
	Audio		Dual
	Sat.Link		TV/R
	A1		Shift + Subt

