

 
 


Original	Substitut	Original	Substitut
 Power	 Power	 Yellow	 Yellow
 Mute	 Mute	 Cyan	 Blue
 PIP	 Play	 Index	 Info
 PIP Source	 I<<	 Size	 Format
 PIP Position	 <<	 Hold	 Stop
 PIP Size	 >>	 Text	 Text
 PIP Swap	 >>I	 Audio -	 Shift + Left
 Up	 Up	 Audio MTS	 Shift + Ok
 Left	 Left	 Audio +	 Shift + Right
 Menu	 Menu	 Sleep	 Sleep
 Menu	 Ok	 CH+	 Ch +
 Right	 Right	 CH-	 Ch -
 Down	 Down	 Vol+	 Vol +
 Page +	 Shift + Ch +	 Vol-	 Vol -
 Page -	 Shift + Ch -	 TV	 TV/R
 Red	 Red	 Scaling	 Eject
 Green	 Green	 Freeze	 Pause

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 Play	 Play	 Pause	 Pause
 Stop	 Stop	 FF	 FF
 RR	 RR	 SOUND	 AD
 SETTINGS	 SETTINGS	 DUAL	 SUBT
 LIST	 LIST	 PICTURE	 ECO
 PROG	 PROG	 FORMAT	 3D
 SLEEP	 SLEEP	 TV/R	 TIMER
 E-MANUAL	 E-MANUAL	 REPEAT	 AV
 D.MENU	 D.MENU	 ZOOM	 ZOOM
 TEXT	 TEXT	 UP	 UP
 TOP MENU	 TOP MENU	 MENU	 MENU
 INFO	 INFO	 OK	 OK
 CLEAR	 CLEAR	 RETURN	 RETURN
 EXIT	 EXIT	 BACK	 BACK
 VOL+	 VOL+	 HOME	 HOME
 VOL-	 VOL-	 SMART	 SMART
 CH+	 CH+	 APP	 APP
 CH-	 CH-	 MEDIA	 MEDIA
 Vol+	 Vol+	 + CH	 + CH
 Vol-	 Vol-	 CH -	 CH -
 TV	 TV	 + VOL	 + VOL
 Scaling	 Scaling	 VOL -	 VOL -
 Freeze	 Freeze	 SEARCH TV/R	 SEARCH TV/R
 Freeze	 Freeze	 TV/R	 TV/R
 Freeze	 Freeze	 ZOOM	 ZOOM
 Freeze	 Freeze	 Eject	 Eject
 Freeze	 Freeze	 Pause	 Pause
 Freeze	 Freeze	 Pause	 Pause





Original		Substitut		Original		Substitut	
	Source		AV				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	CH		Guide				
	R		Pre Ch				

