















 

 
 
 

 
 


 

 



 



 



 



 



























Original	Substitut	Original	Substitut
 Power	 Power	 Recall	 Back / Return
 Source	 AV / Input / RDS	 FAV	 Fav / Marker / PC
 Nicam / A2	 Shift + Audio / Lang I/II	 Freeze	 Pause / Step / Freeze
 Aspect	 Zoom / Size	 TV / Radio	 TV/Radio /
 P.Mode	 Picture / Format	 Red	 Red / Netflix / Search
 S.Mode	 Sound / Title	 Green	 Green / APP / Repeat
 1	 1	 Yellow	 Yellow / YouTube / Repeat
 2	 2	 Blue	 Blue / Prime Video / Random
 3	 3	 Sleep	 Sleep / Timer
 4	 4	 Up	 Up
 5	 5	 EPG	 Guide / EPG / -/-
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Menu	 Menu / Home
 -/-	 Shift + Guide / EPG / -/-	 Down	 Down
 0	 0	 Exit	 Exit / Cancel / Clear

Original	Substitut	Original	Substitut
 Recall	 Back / Return	 TV	 AUX
 FAV	 Fav / Marker / PC	 DVD	 REC MODE
 Freeze	 Pause / Step / Freeze	 SAT	 HOLD
 TV / Radio	 TV/Radio /	 SLOW	 STEP - FREEZE
 Red	 Red / Netflix / Search	 TUNE+	 PRESET-
 Green	 Green / APP / Repeat	 TUNE-	 PRESET+
 Yellow	 Yellow / YouTube / Repeat	 TITLE	 EQ
 Blue	 Blue / Prime Video / Random	 LANG I/II	 SURROUND
 Sleep	 Sleep / Timer	 SOUND	 SUBTITLE
 Up	 Up	 AUDIO	 TIMER
 EPG	 Guide / EPG / -/-	 PICTURE	 PROGRAM
 Left	 Left	 ZOOM	 TV RADIO
 OK	 OK	 SLEEP	 RDS
 Right	 Right	 TOP MENU	 AV INPUT
 Menu	 Menu / Home	 OPT-TOOLS	 D.MENU
 Down	 Down	 GOTO	 SETUP
 Exit	 Exit / Cancel / Clear	 TEXT	 TEXT





Original	Substitut
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Play/Pause / Hold	 Play / Slow
 << / Reveal	 << / Tune-
 >> / Size	 >> / Tune+
 Stop / Index	 Stop / Hold
 I<<	 I<< / Preset-
 >>I / S.Page	 >>I / Preset+
 TTX	 Text / Goto
 T.Shift	 Setup / OPT /
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Rec / Auto	 Rec / Rec Mode

Original	Substitut
 PVR	 Smart / List

