 
 
 
 
 
 
 
 
 

 


 

 
 
 
 
 

 

 

 

 

















 

 

 

 

 

 

 

 

 

 








Original	Substitut	Original	Substitut
 Power	 Power	 Vol+	 Vol +
 Mute	 Mute	 Vol-	 Vol -
 Sleep	 Sleep	 Left	 Left
 Nicam/A2	 Dual	 Enter	 Ok
 Still	 Pause	 1	 1
 16:9	 Format	 2	 2
 NR.	 Options	 3	 3
 Surround	 List	 4	 4
 Picture	 Shift + Format	 5	 5
 Tv/Av	 AV	 6	 6
 Display	 Info	 7	 7
 Sound	 Shift + Dual	 8	 8
 Up	 Up	 9	 9
 CH+	 Ch +	 0	 0
 CH-	 Ch -	 -/--	 Guide
 Down	 Down	 Recall	 Pre Ch
 Right	 Right	 Red	 Red

Original	Substitut	Original	Substitut
 Vol+	 Vol +	 Vol+	 Vol +
 Vol-	 Vol -	 Vol-	 Vol -
 Left	 Left	 Left	 Left
 Enter	 Ok	 Enter	 Ok
 1	 1	 1	 1
 2	 2	 2	 2
 3	 3	 3	 3
 4	 4	 4	 4
 5	 5	 5	 5
 6	 6	 6	 6
 7	 7	 7	 7
 8	 8	 8	 8
 9	 9	 9	 9
 0	 0	 0	 0
 -/--	 Guide	 -/--	 Guide
 Recall	 Pre Ch	 Recall	 Pre Ch
 Red	 Red	 Red	 Red



