













 


 



 







































 

 

Original	Substitut	Original	Substitut
	Power		Power
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/-- / +10		Guide / EPG / -/--
	Recall		Back / Return
	P-Mode		Picture / Format

Original	Substitut	Original	Substitut
	S-Mode		Sound / Title
	Nicam / Audio		Audio / Lang I/II
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Down		Down
	Red / Program		Red / Netflix / Search
	Red / Program		TV/Radio /
	Green / Goto		Green / APP / Repeat
	Yellow / Angle		Yellow / YouTube / Repeat
	Blue / USB/Card		Blue / Prime Video / Random
	Subtitle		Subtitle / EQ
	Info		Info / Angle
	Menu / Exit		Menu / Home
	Menu / Exit		Exit / Cancel / Clear
	+ / FAV+		Vol+





Original	Substitut
 Canales / Repeat	 Display / Media
 EPG /	 Shift + Guide / EPG / -/-
 EPG /	 D.Menu / Top
 - / FAV-	 Vol-
 FAV / AB	 Fav / Marker / PC
 Teletext / Eject	 Eject / Surround
 Teletext / Eject	 Text / Goto
 Play/Pause / Mix	 Play / Slow
 Play/Pause / Mix	 Pause / Step / Freeze
 Stop / Hold	 Stop / Hold
 DVD-Setup	 Setup / OPT /
 << / Index	 << / Tune-
 Up / P.Up	 Shift + Up
 >> / Size	 >> / Tune+
 Left / Cancel	 Shift + Left
 OK / Reveal	 Shift + OK
 Right / Clock	 Shift + Right

Original	Substitut
 I<< / TV/Radio	 I<< / Preset-
 Down / P.Down	 Shift + Down
 >>I / Subpage	 >>I / Preset+

