



 
 

 
 
 

 

 

 
 




 





 










 

 



 
 

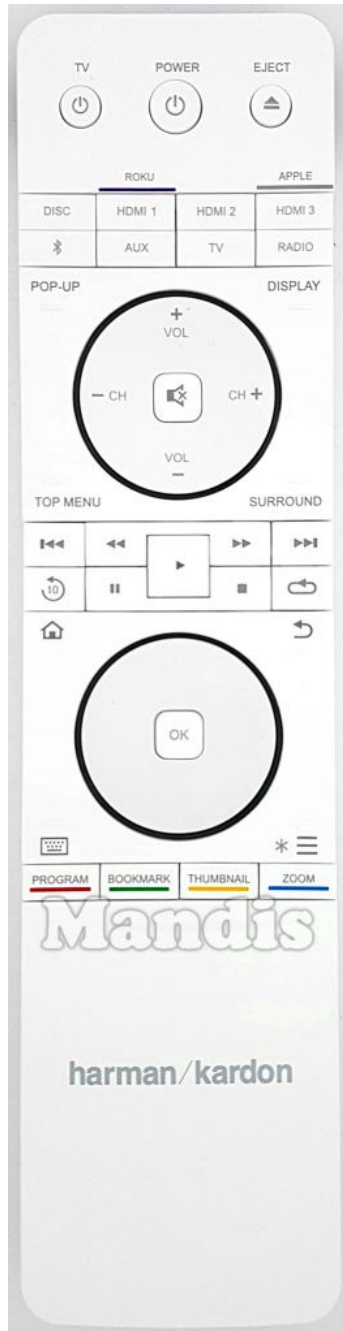 





 












 
 


 



 


 
 
 
Original	Substitut
 Power	 Power
 Eject	 Eject
 Disc	 1
 HDMI1/Roku	 2
 HDMI2	 3
 HDMI3/Aple	 4
 Bluetooth	 5
 AUX	 6
 TV	 7
 Radio	 TV/R
 Pop Up	 D. Menu
 Display	 Info
 Top Menu	 Menu
 Surround	 Dual
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Substitut
 CH+	 Ch +
 CH-	 Ch -
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Recall	 Pre Ch
 (10)	 Media
 [::]	 Guide
 Home	 Smart
 *≡	 Options
 Back	 Back
 Up	 Up
 Down	 Down

 






	Original	Substitut	Original	Substitut
	Power			
	Pop Up			
	Play			
	>>			
	<<			
	Pause			
	Stop			
	OK			
	Up			
	Down			
	Right			
	Left			
	Vol+			
	Vol-			
	Mute			



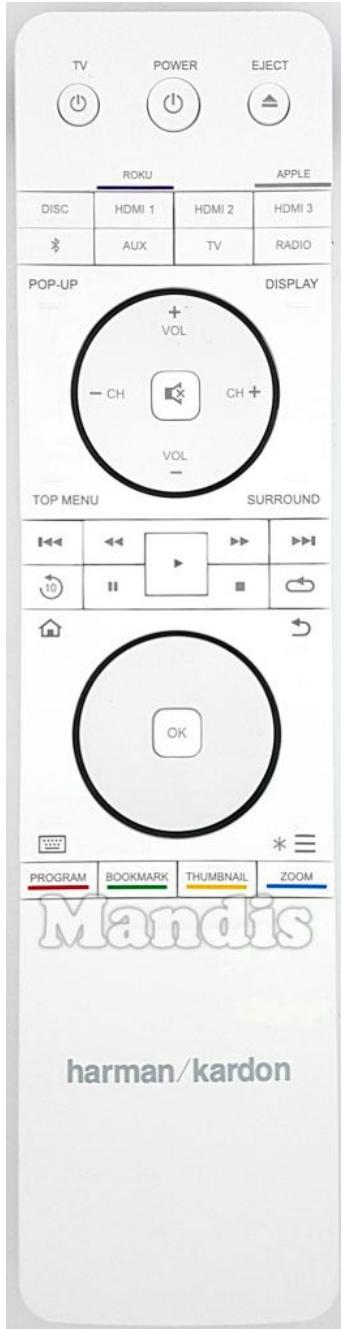

Original	Substitut
Power Tv	Power
Eject	Eject
Pop Up	D. Menu
Vol+	Vol +
Vol-	Vol -
Mute	Mute
Recall	Back
Up	Up
OK	Ok
Down	Down
Right	Right
Left	Left
Red/Program	Red
Green/Bookmar	Green
Yellow/Thumbnail	Yellow
Blue/Zoom	Blue
CH+	Ch +

Original	Substitut
CH-	Ch -

