




















Original	Substitut
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Recall
	0
	Info
	Menu
	Exit
	Up

Original	Substitut
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Back / Return
	0
	Info / Angle
	Menu / Home
	Exit / Cancel / Clear
	Up

Original	Substitut
	Left
	OK
	Right
	Sat
	Down
	FAV
	TV / Radio
	Guide
	Freeze
	Aux In
	UHF
	Red / Audio
	Red / Audio
	Green / Positioner
	Yellow / Text
	Yellow / Text
	Blue / Audio R/L

Original	Substitut
	Left
	OK
	Right
	Shift + 0
	Down
	Fav / Marker / PC
	TV/Radio /
	Guide / EPG / -/-
	Pause / Step / Freeze
	AV / Input / RDS
	Smart / List
	Audio / Lang I/II
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Text / Goto
	Blue / Prime Video / Random



