

















 


 



 

 


 

 





 



 


 

 






| Original | Substitut | Original | Substitut |
|---|--|---|--|
|  Power |  Power |  Still |  Pause |
|  Mute |  Mute |  S.Mode |  Shift + Dual |
|  1 |  1 |  Sleep |  Sleep |
|  2 |  2 |  Volume+ |  Vol + |
|  3 |  3 |  Volume- |  Vol - |
|  4 |  4 |  Channel+ |  Ch + |
|  5 |  5 |  Channel- |  Ch - |
|  6 |  6 |  PIP On/Off |  Smart |
|  7 |  7 |  Source |  Shift + AV |
|  8 |  8 |  Size |  Eject |
|  9 |  9 |  Swap |  Back |
|  0 |  0 |  Up / P-CH + |  Up |
|  /-- |  Guide |  Down / P-CH - |  Down |
|  Preview |  Pre Ch |  Right |  Right |
|  Sound |  Dual |  Left |  Left |
|  Picture |  Shift + Format |  Menu |  Menu |
|  Aspect |  Format |  Menu |  Ok |

| Original | Substitut | Original | Substitut |
|---|--|--|--|
|  Power |  Mute |  Shift | |
|  TV |  DVD |  SAT |  AUX |
|  PLAY MODE |  REC MODE |  DUAL |  SUBT |
|  DISC NAV |  SOUND |  AD |  SETTINGS |
|  LIST |  DUAL |  PICTURE |  ECO |
|  PROG |  SEARCH |  FORMAT |  3D |
|  SLEEP |  REPEAT |  ZOOM |  TIMER |
|  E-MANUAL |  TEXT |  AV | |
|  D.MENU |  TOP MENU |  DISPLAY | |
|  MENU |  OK |  INFO | |
|  CLEAR |  EXIT |  RETURN |  BACK |
|  + VOL |  HOME SMART |  + CH | |
|  - VOL |  APP |  MEDIA | |
|  1 |  2 |  3 | |
|  4 |  5 |  6 | |
|  7 |  8 |  9 | |
|  /-- |  GUIDE |  0 |  FAV |
|  PREVIEW |  PRE-CH |  PRE-CH | |
|  SOUND |  A |  B |  C |
|  PICTURE |  D | | |
|  ASPECT | | | |





| Original | Substitut | Original | Substitut |
|---|-------------|---|---------------|
|  | Exit |  | Exit |
|  | TV / AV |  | AV |
|  | Info |  | Info |
|  | Wiper |  | Media |
|  | PC Auto |  | Options |
|  | TTX On/Off |  | Text |
|  | TTX / Mix |  | Shift + Text |
|  | Index |  | Shift + Info |
|  | List / FLOF |  | Shift + Smart |
|  | Store |  | TV/R |
|  | Hold |  | Stop |
|  | Reveal |  | Shift + Subt |
|  | Subpage |  | Subt |
|  | Size |  | Shift + Eject |
|  | Red |  | Red |
|  | Green |  | Green |
|  | Yellow |  | Yellow |

| Original | Substitut | Original | Substitut |
|---|-----------|---|-----------|
|  | Blue |  | Blue |

