
































Original	Substitut	Original	Substitut
 Power	 Power	 Up	 Up
 [=i] / Info	 Info / Angle	 Left	 Left
 Mute	 Mute / Dimmer	 Enter	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 CH+	 CH+ / Page+
 4	 4	 Index	 D.Menu / Top
 5	 5	 Vol+	 Vol+
 6	 6	 CH-	 CH- / Page-
 7	 7	 List	 Smart / List
 8	 8	 Vol-	 Vol-
 9	 9	 FAV	 Fav / Marker / PC
 [=?] / AV	 AV / Input / RDS	 Sleep	 Sleep / Timer
 0	 0	 EPG	 Guide / EPG / -/-
 Audio	 Audio / Lang I/II	 Recall	 Back / Return
 Menu	 Menu / Home	 Red / <<	 Shift + Red / Netflix /
 Exit	 Exit / Cancel / Clear	 Red / <<	 Red / Netflix / Search

Original	Substitut	Original	Substitut
 DIMMER MUTE	 SHIFT	 TV	 DVD
 STEP-FREEZE	 HOLD	 TUNE-	 TUNE+
 PRESET-	 PRESET+	 TITLE	 LANG I/II
 EQ	 SURROUND	 SOUND	 AUDIO
 SUBTITLE	 TIMER	 FORMAT	 SIZE
 PROGRAM	 TV RADIO	 PICTURE	 ZOOM
 RDS	 AV INPUT	 TOP MENU	 OPT-TOOLS
 GOTO	 TEXT	 D.MENU	 SETUP
 HOME	 ANGLE	 MENU	 INFO
 OK	 RETURN	 CLEAR	 EXIT
 CANCEL	 BACK	 VOL+	 SMART
 LIST	 CH PAGE	 VOL-	 MEDIA
 TV	 DVD	 TV	 DISPLAY
 DVD	 CD- STB	 1	 2
 CD- STB	 VIDEO	 3	 TAPE
 VIDEO	 TUNER	 4	 USB
 TUNER	AUX- HDD	5	BLUETOOTH
AUX- HDD	USB	6	PC
USB	HDMI- BAT	7	FAV MARKER
HDMI- BAT	PC	8	GUIDE EPG
PC	FAV MARKER	9	NETFLIX
FAV MARKER	SEARCH	0	APP
NETFLIX	REPEAT	GUIDE EPG	YouTube
REPEAT	RANDOM	0	Prime Video
RANDOM	Mandis SHOP	1	www.mandis.tv



