






 



 















 



 







Original	Substitut	Original	Substitut
	Power		Power
	Tv/Radio		TV/R
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	EPG		Guide
	Recall		Back
	Menu		Menu
	FAV		Pre Ch

Original	Substitut	Original	Substitut
	Info		Info
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/F1		Red
	Green/F2		Green
	Yellow/F3		Yellow
	Blue/F4		Blue
	Subt		Subt
	Audio		Dual





	Original	Substitut		Original	Substitut
TXT	TXT	REPEAT TEXT	Text		
ZOOM	Zoom	ZOOM	Eject		
PLAY/PAUSE	Play/Pause	PLAY MODE	Play		
STOP	Stop		Stop		
SLOW	I>/Slow		Pause		
REC	Rec	REC MODE	Rec		
FRW	<<		<<		
FFW	>>		>>		
PREVIOUS	I<<		I<<		
NEXT	>>I		>>I		

