
 










 



 











 

 

 

 

 

 

 

 

 



Original	Substitut
	Power
	TV/AV
	TV/TXT
	Cancel
	Reveal
	DTV
	Hold
	Size
	Subpage
	Index
	Red
	Green
	Yellow
	Blue
	CH+
	Menu
	Vol+

Original	Substitut
	CH-
	Exit
	Vol-
	Channel List
	Mute
	Up
	Left
	OK
	Right
	EPG
	Down
	Info
	1
	2
	3
	4
	5





	Original	Substitut		Original	Substitut
	6	 6		>>	 >>  / Preset+
	7	 7		Play	 Play / Slow
	8	 8		Pause	 Pause / Step / Freeze
	9	 9			
	FAV	 Fav / Marker / PC			
	0	 0			
	Recall	 Back / Return			
	Picture	 Picture / Format			
	Sound	 Sound / Title			
	Nicam/A2	 Audio / Lang I/II			
	Sleep	 Sleep / Timer			
	Subtitle	 Subtitle / EQ			
	Tv/Radio	 TV/Radio /			
	<<	 << / Tune-			
	>>	 >> / Tune+			
	Repeat	 Shift + Green / APP /			
	I<<	 I<< / Preset-			

