




 

 

 

 



 






 












 



 

 



 





 



 






 
 

 
 
 


 






 



Original	Substitut	Original	Substitut
 Power	 Power	 P+	 Ch +
 Tv	 TV/R	 P-	 Ch -
 PRE CH	 Pre Ch	 Menu	 Menu
 0	 0	 Exit	 Exit
 1	 1	 Return	 Back
 2	 2	 Tools	 Options
 3	 3	 Guide	 Guide
 4	 4	 Enter	 Ok
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 Right	 Right
 9	 9	 CH LIST	 List
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 TTX/MIX	 Text
 Mute	 Mute	 SUBT	 Subt
 Source	 AV	 SRS	 Smart

Original	Substitut	Original	Substitut
 P+	 Ch +	 TV	 DVD
 P-	 Ch -	 SAT	 AUX
 Menu	 Menu	 PLAY MODE	 REC MODE
 Exit	 Exit	 STOP	 PAUSE
 Return	 Back	 LEFT	 RIGHT
 Tools	 Options	 DISC NAV	 SOUND
 Guide	 Guide	 AD	 SETTINGS
 Enter	 Ok	 LIST	 SUBT
 Up	 Up	 PROG	 SEARCH
 Down	 Down	 PICTURE	 ECO
 Left	 Left	 SLEEP	 TV/R
 Right	 Right	 FORMAT	 3D
 CH LIST	 List	 E-MANUAL	 REPEAT
 Info	 Info	 ZOOM	 TIMER
 TTX/MIX	 Text	 D.MENU	 TEXT
 SUBT	 Subt	 TOP MENU	 DISPLAY
 SRS	 Smart	 OK	 RETURN





Original		Substitut		Original		Substitut	
	P SIZE		Format				
	Dual		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Rec		Rec				
	AD		Shift + Subt				
	FAV CH		Shift + Pre Ch				

