




 

 

 

 



 






 












 



 

 



 





 



 






 
 

 
 
 






Original	Substitut	Original	Substitut
 Power	 Power	 P+	 Ch +
 Tv	 TV/R	 P-	 Ch -
 PRE CH	 Pre Ch	 Menu	 Menu
 0	 0	 Exit	 Exit
 1	 1	 Return	 Back
 2	 2	 Tools	 Options
 3	 3	 Guide	 Guide
 4	 4	 Enter	 Ok
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Left	 Left
 8	 8	 Right	 Right
 9	 9	 CH LIST	 List
 Vol+	 Vol +	 Info	 Info
 Vol-	 Vol -	 TTX/MIX	 Text
 Mute	 Mute	 SUBT	 Subt
 Source	 AV	 SRS	 Smart

Original	Substitut	Original	Substitut
 P+	 Ch +	 TV	 DVD
 P-	 Ch -	 SAT	 AUX
 Menu	 Menu	 PLAY MODE	 REC MODE
 Exit	 Exit	 ▶	 ⏸
 Return	 Back	 ■	 ●
 Tools	 Options	 ⏮	 ⏭
 Guide	 Guide	 ◀	 ▶
 Enter	 Ok	 ■	 ⏏
 Up	 Up	 LIST	 SOUND
 Down	 Down	 DUAL	 AD
 Left	 Left	 SUBT	 SETTINGS
 Right	 Right	 PROG	 ECO
 CH LIST	 List	 SLEEP	 TV/R
 Info	 Info	 FORMAT	 3D
 TTX/MIX	 Text	 E-MANUAL	 REPEAT
 SUBT	 Subt	 ZOOM	 TIMER
 SRS	 Smart	 D.MENU	 TEXT
		 AV	





Original		Substitut		Original		Substitut	
	P SIZE		Format				
	Dual		Dual				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	<<		<<				
	>>		>>				
	Rec		Rec				
	AD		Shift + Subt				
	FAV CH		Shift + Pre Ch				

