 




 
 
 









 

 











 
 







	Original	Substitut		Original	Substitut
	Power		Power		Exit
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		OK
	5		5		Vol+
	6		6		Vol-
	7		7		Sound
	8		8		PIC
	9		9		CH+
	0		0		CH-
	Audio		Dual		Sleep
	Recall		Back		Aspect
	Tv Menu		Menu		Freeze
	Source		AV		USB
	CH List		List		Text
					Exit
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
				 + 	Shift + Dual
					Format
					Ch +
					Ch -
					Sleep
					3D
					Options
					Media
					Text





	Original	Substitut		Original	Substitut
	EPG	 Guide		I<<	 I<<
	FAV	 Pre Ch		>>I	 >>I
	Info	 Info		Play	 Play
	Red	 Red		Pause	 Pause
	Green	 Green		Stop	 Stop
	Yellow	 Yellow		Rec/Rep	 Rec
	Blue	 Blue			
	DTV	 TV/R			
	Hold	 Eject			
	List	 Shift + List			
	Subpage	 Shift + Subt			
	Index	 Smart			
	PVR List	 D. Menu			
	Mix	 Shift + 3D			
	Subtitle	 Subt			
	<<	 <<			
	>>	 >>			

