

 






 





 










 
 
 

 
 






Original	Substitut	Original	Substitut
 Power	 Power	 DVD	 Eject
 Mute	 Mute	 PMode	 Shift + Format
 SMode	 Shift + Dual	 Nicam	 Dual
 Aspect	 Format	 1	 1
 2	 2	 3	 3
 4	 4	 5	 5
 6	 6	 7	 7
 8	 8	 9	 9
 0	 0		

Original	Substitut	Original	Substitut
 Recall	 Shift + Guide	 Red / DVD P.Scan	 Red
 Green / DVD Goto	 Green	 Yellow / DVD	 Yellow
 Blue / DVD Media	 Blue	 Blue / DVD Media	 Blue
 Media	 Media	 PR+ / Up	 Ch +
 PR+ / Up	 Shift + Up	 PR- / Down	 Ch -
 PR- / Down	 Shift + Down	 Vol+ / Right	 Vol +
 Vol+ / Right	 Shift + Right	 Vol- / Left	 Vol -
 Vol- / Left	 Shift + Left	 Menu	 Menu
 Source	 AV		





Original	Substitut	Original	Substitut
 Sleep	Sleep	 Sleep	Sleep
 Display Info	Display Info	 Info	Info
 Enter	Enter	 Shift + Ok	Shift + Ok
 TXT / DVD Repeat	TXT / DVD Repeat	 Text	Text
 Hold / DVD A-B	Hold / DVD A-B	 TV/R	TV/R
 Lucidity / DVD Language	Lucidity / DVD Language	 Options	Options
 Subpage / DVD Subtitle	Subpage / DVD Subtitle	 Subt	Subt
 Index / DVD Setup	Index / DVD Setup	 Smart	Smart
 Size / DVD	Size / DVD	 Shift + D. Menu	Shift + D. Menu
 Reveal / DVD Title	Reveal / DVD Title	 List	List
 Cancel / DVD	Cancel / DVD	 Shift + Eject	Shift + Eject
 DTV Menu / DVD	DTV Menu / DVD	 D. Menu	D. Menu
 DTV Menu / DVD	DTV Menu / DVD	 <<	<<
 DVD >>	DVD >>	 >>	>>
 FAV / DVD Play/Pause	FAV / DVD Play/Pause	 Pre Ch	Pre Ch
 FAV / DVD Play/Pause	FAV / DVD Play/Pause	 Play	Play
 FAV / DVD Play/Pause	FAV / DVD Play/Pause	 Pause	Pause

Original	Substitut	Original	Substitut
 Exit / DVD Stop	Exit / DVD Stop	 Exit	Exit
 Exit / DVD Stop	Exit / DVD Stop	 Stop	Stop
 Page Up / DVD	Page Up / DVD	 Shift + Ch +	Shift + Ch +
 Page Down / DVD	Page Down / DVD	 Shift + Ch -	Shift + Ch -
 Up	Up	 Up	Up
 Left	Left	 Left	Left
 OK / DVD Select	OK / DVD Select	 Ok	Ok
 Right	Right	 Right	Right
 Down	Down	 Down	Down
 EPG / DVD □	EPG / DVD □	 Guide	Guide

