




Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --	 Shift + Guide / EPG / -/-
 0	 0
 Back	 Back / Return
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 Format	 Picture / Format

Original	Substitut
 Fav	 Fav / Marker / PC
 Vol+	 Vol+
 Page+	 Shift + CH+ /
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Page-	 Shift + CH- /
 CH-	 CH- / Page-
 Lang	 Audio / Lang I/II
 TV/Rad	 TV/Radio /
 Info	 Info / Angle
 EPG	 Guide / EPG / -/-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Substitut
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / SOS	 Blue / Prime Video / Random
 Timer	 Sleep / Timer
 Eject	 Eject / Surround
 List	 Smart / List
 II>	 Shift + Pause / Step /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Substitut

