



Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 Net+	 Shift + Up
 DTV	 D.Menu / Top
 USB	 Shift + 8
 YouTube	 Shift + Yellow / YouTube / REPEAT A-B
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0

Original	Substitut
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Picture	 Picture / Format
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 FAV	 Fav / Marker / PC





Original	Substitut	Original	Substitut
 Info	 Info / Angle	 Red/Goto	 Red / Netflix / Search
 Sleep	 Sleep / Timer	 Green/A-B	 Green / APP / Repeat
 Audio	 Audio / Lang I/II	 Yellow/Angle/3D	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ	 Blue/Repeat	 Blue / Prime Video / Random
 Text	 Text / Goto		
 Text/Hold	 Shift + Text /		
 Text/DVD Zoom	 Zoom / Size		
 Power Display	 Shift + Power		
 Rec	 Rec / Rec Mode		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Stop	 Stop / Hold		
 Rec List	 Shift + Rec / Rec Mode		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		

