





 

 





 



 







 

 



 






Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	Set		Media
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Home		Smart
	Pause		Pause
	Play		Play
	Back		Back
	Menu		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Original	Substitut	Original	Substitut
	Vol+		Vol +
	Vol-		Vol -
	On Page		TV/R
	Next Page		Options
	CH+		Ch +
	CH-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Delete		Guide





Original	Substitut
# 输入法	TIMER AV

Original	Substitut

