









 








 


Original	Substitut	Original	Substitut
 Power	 Power	 Sleep	 Sleep / Timer
 CBL/SAT	 Shift + 0	 Volume+	 Vol+
 DVD	 Shift + 2	 CH/Page-	 CH- / Page-
 TV Audio	 Shift + 1	 Mute	 Mute / Dimmer
 Blu-ray	 Shift + 5	 Volume-	 Vol-
 AUX1	 Shift + 7	 Eco	 D.Menu / Top
 Tuner	 Shift + 6	 Info	 Info / Angle
 Bluetooth	 Shift + 9	 Up	 Up
 Game	 Shift + Fav / Marker / PC	 Option	 Shift + Setup / OPT / Tools
 AUX2	 Shift + Guide / EPG / -/-	 Left	 Left
 Phono	 Shift + 4	 Right	 Right
 USB	 Shift + 8	 Back	 Back / Return
 Media Player	 Display / Media	 Down	 Down
 CD	 Shift + 3	 Setup	 Setup / OPT /
 Online Music	 Smart / List	 Home	 Menu / Home
 Internet Radio	 Shift + Smart / List	 Stop	 Stop / Hold
 CH/Page+	 CH+ / Page+	 Pause	 Pause / Step / Freeze





Original	Substitut	Original	Substitut
	Play		Play / Slow
	I<</Tune-		I<< / Preset-
	I<</Tune-		Shift + << /
	>>I/Tune+		>>I / Preset+
	>>I/Tune+		Shift + >> /
	<<		<< / Tune-
	>>		>> / Tune+
	Smart Select 1		Shift + Red / Netflix /
	Smart Select 2		Shift + Green / APP /
	Smart Select 3		Shift + Yellow / YouTube /
	Smart Select 4		Shift + Blue / Prime
	Green/Movie		Green / APP / Repeat
	Red/Music		Red / Netflix / Search
	Blue/Game		Blue / Prime Video / Random
	Yellow/Pure		Yellow / YouTube / Repeat
	1		1
	2		2

Original	Substitut	Original	Substitut
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		OK







Original	Substitut
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substitut
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original	Substitut
>> / Tune+	+  Shift + >> /
<<	<< / Tune-
>>	>> / Tune+
Smart Select 1	Red / Netflix / Search
Smart Select 2	Green / APP / Repeat
Smart Select 3	Yellow / YouTube / Repeat
Smart Select 4	Blue / Prime Video / Random
1	TV 1
2	DVD 2
3	CD - STB 3
4	VIDEO 4
5	TAPE 5
6	TUNER 6
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - BAT 0

Original	Substitut
Enter	OK







Original	Substitut
 Power	 Power
 CBL/SAT	 Shift + 0
 DVD	 Shift + 2
 TV Audio	 Shift + 1
 Blu-ray	 Shift + 5
 AUX1	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Fav / Marker / PC
 AUX2	 Shift + Guide / EPG / -/-
 Phono	 Shift + 4
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Online Music	 Smart / List
 Internet Radio	 Shift + Smart / List
 CH/Page+	 CH+ / Page+

Original	Substitut
 Sleep	 Sleep / Timer
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 I<</Tune-	 Shift + << /
 I<</Tune-	 I<< / Preset-
 >>I/Tune+	 >>I / Preset+





Original		Substitut		Original		Substitut	
	>>/Tune+		Shift + >> /		Enter		OK
	<<		<< / Tune-				
	>>		>> / Tune+				
	Smart Select 1		Red / Netflix / Search				
	Smart Select 2		Green / APP / Repeat				
	Smart Select 3		Yellow / YouTube / Repeat				
	Smart Select 4		Blue / Prime Video / Random				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

