




 





 
 
 

 



 
 




 

 



 



 
 


 

 

 



 

 
 
 

 

 
 


 

 



 

 




Original	Substitut	Original	Substitut
 Power	 Power	 Top Menu	 D. Menu
 Sleep	 Sleep	 Menu	 Menu
 Clock / Timer	 AV	 Up	 Up
 Cancel	 Exit	 Left	 Left
 1	 1	 Enter	 Ok
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Setup	 Options
 5	 5	 Display	 Info
 6	 6	 Angle	 Format
 7	 7	 Return	 Back
 8	 8	 DVD/CD	 Red
 9	 9	 TAPE	 Green
 0	 0	 EXT	 Yellow
 >≧10 / -/-	 Guide	 TUNER	 Blue
 Subtitle	 Subt	 Stop	 Stop
 Audio	 Dual	 Pause / Rev. Play	 Pause

Original	Substitut	Original	Substitut
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 TV	 DVD	 DVD
 SAT	 SAT	 AUX	 AUX
 PLAY MODE	 PLAY MODE	 REC MODE	 REC MODE
 ▶	 ▶	 ■	 ■
 ⏮	 ⏮	 ⏭	 ⏭
 SOUND	 SOUND	 AD	 SETTINGS
 LIST	 LIST	 SUBT	 OPT
 PROG	 PROG	 PICTURE	 ECO
 SLEEP	 SLEEP	 TV/R	 3D
 E-MANUAL	 E-MANUAL	 REPEAT	 TIMER
 D.MENU	 D.MENU	 TEXT	 AV
 TOP MENU	 TOP MENU	 DISPLAY	 INFO
 MENU	 MENU	 OK	 OK
 CLEAR	 CLEAR	 RETURN	 BACK
 EXIT	 EXIT	 HOME	 SMART
 +	 +	 APP	 MEDIA
 -	 -	 +	 -
 1	 1	 2	 3
 2	 2	 3	 4
 3	 3	 4	 5
 4	 4	 5	 6
 5	 5	 6	 7
 6	 6	 7	 8
 7	 7	 8	 9
 8	 8	 9	 0
9	9	0	FAV
0	0	GUIDE	PRE-CH
A	A	B	C
B	B	C	D
C	C	D	D
D	D		





Original	Substitut	Original	Substitut
Play	Play		
Auto / Mono	3D		
I<< Skip	I<<		
Skip >>I	>>I		
<< Slow/Search	<<		
Slow/Search >>	>>		
Muting	Mute		
Repeat	Text		
A-B Repeat	Shift + Text		
Play Mode	Rec		
Volume-	Vol -		
Volume+	Vol +		
Balance L	Ch -		
Balance L	Shift + Left		
Balance R	Ch +		
Balance R	Shift + Right		

