



| Original | Substitut | Original | Substitut |
|----------|-----------|----------|--------------------|
| | Mute | | Mute / Dimmer |
| | Power | | Power |
| | 1 | | 1 |
| | 2 | | 2 |
| | 3 | | 3 |
| | 4 | | 4 |
| | 5 | | 5 |
| | 6 | | 6 |
| | 7 | | 7 |
| | 8 | | 8 |
| | 9 | | 9 |
| | EPG | | Guide / EPG / -/-- |
| | 0 | | 0 |
| | List | | Smart / List |
| | Mode | | D.Menu / Top |
| | i | | Info / Angle |
| | TV/R Live | | TV/Radio / |

| Original | Substitut | Original | Substitut |
|----------|-----------|----------|-----------------------|
| | Up | | Up |
| | Left | | Left |
| | OK | | OK |
| | Right | | Right |
| | Down | | Down |
| | Exit | | Exit / Cancel / Clear |
| | Recall | | Back / Return |
| | Menu | | Menu / Home |
| | CH+ | | CH+ / Page+ |
| | Text | | Text / Goto |
| | Option | | Setup / OPT / |
| | Vol+ | | Vol+ |
| | CH- | | CH- / Page- |
| | F1 | | Shift + 1 |
| | F2 | | Shift + 2 |
| | Vol- | | Vol- |
| | Rec | | Rec / Rec Mode |





| | Original | Substitut | Original | Substitut |
|--|----------|--|----------|-----------|
|  | Play |  Play / Slow | | |
|  | Archive |  Display / Media | | |
|  | << |  << / Tune- | | |
|  | Stop |  Stop / Hold | | |
|  | Pause |  Pause / Step / Freeze | | |
|  | >> |  >> / Tune+ | | |
|  | Red |  Red / Netflix / Search | | |
|  | Green |  Green / APP / Repeat | | |
|  | Yellow |  Yellow / YouTube / Repeat | | |
|  | Blue |  Blue / Prime Video / Random | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

