






 


 

 








 








 
 
 
 
 
 








 

 

 



 
 


 

 
 








Original	Substitut	Original	Substitut
	Power		Power
	Mute		Mute
	Format		Format
	SAT		Smart
	TV/STB		Media
	TV/Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Back		Back

Original	Substitut	Original	Substitut
	EPG		Guide
	Menu		Menu
	Info		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Exit		Exit
	CH+ />>I		Ch +
	CH-/I<<		Ch -
	Red/Text		Red
	Green/Audio		Green
	Yellow/Sub.T		Yellow
	Blue/Find		Blue





Original	Substitut	Original	Substitut
 EDIT	Edit	 ECO 3D	3D
 OPT	OPT	 SETTINGS OPT	Options
 USB/PVR	USB/PVR	 TIMER AV	AV
 FAV	FAV	 FAV PRE-CH	Pre Ch
 REW	<<	 REW	<<
 PLAY	Play	 PLAY MODE	Play
 PAUSE	Pause	 PAUSE	Pause
 FF	>>	 FF	>>
 STOP	Stop	 STOP	Stop
 PG DOWN	Pg Down	 PG DOWN	I<<
 PG UP	Pg Up	 PG UP	>>I
 REC	Rec	 REC MODE	Rec

