




Original	Substitut	Original	Substitut
 Power	 Power	 Tools	 Setup / OPT /
 TV	 TV/Radio /	 Up	 Up
 1	 1	 Return	 Back / Return
 2	 2	 Left	 Left
 3	 3	 Enter	 OK
 4	 4	 Right	 Right
 5	 5	 Internet	 Smart / List
 6	 6	 Down	 Down
 7	 7	 Exit	 Exit / Cancel / Clear
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green	 Green / APP / Repeat
 FAV CH	 Shift + Fav / Marker / PC	 Yellow	 Yellow / YouTube / Repeat
 0	 0	 Blue	 Blue / Prime Video / Random
 PRE CH	 Fav / Marker / PC	 Vol+	 Vol+
 Info	 Info / Angle	 Source	 AV / Input / RDS
 Menu	 Menu / Home	 P +	 CH+ / Page+
 Guide	 Guide / EPG / -/--	 Vol-	 Vol-

Original	Substitut	Original	Substitut
 Power	 DIMMER MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 SLOW	 STEP-FREEZE	 HOLD	 REC MODE
 TUNE-	 TUNE+	 PRESET-	 PRESET+
 TITLE	 LANG VUI	 EQ	 SURROUND
 SOUND	 AUDIO	 SUBTITLE	 PROGRAM
 FORMAT	 SIZE	 TIMER	 TV RADIO
 PICTURE	 ZOOM	 SLEEP	 RDS
 TOP MENU	 OPT-TOOLS	 GOTO	 AV INPUT
 D.MENU	 SETUP	 TEXT	
 HOME		 ANGLE	
 MENU		 OK	 INFO
 CLEAR		 RETURN	 BACK
 EXIT			
 CANCEL		 SMART	 CH PAGE
 VOL+		 MEDIA	 SEARCH
 VOL-		 DISPLAY	
 TV			 DVD
 1			 CD - STB
 2			 TUNER
 3			
 4			
5			
6			
7			
8			
9			
GUIDE EPG			
			
			





Original	Substitut
Mute	Mute / Dimmer
P -	CH- / Page-
TTX/MIX	Text / Goto
Media P	Display / Media
Content	D.Menu / Top
CH LIST	Shift + Smart / List
AD	Audio / Lang I/II
SUBT	Subtitle / EQ
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold

Original	Substitut

