











| Original  | Substitut  |
|---|--|
|  Power     |  Power              |
|  Mute      |  Mute / Dimmer      |
|  1         |  1                  |
|  2         |  2                  |
|  3         |  3                  |
|  4         |  4                  |
|  5         |  5                  |
|  6         |  6                  |
|  7         |  7                  |
|  8        |  8                 |
|  9       |  9                |
|  CH.List |  Smart / List     |
|  0       |  0                |
|  Recall  |  Back / Return    |
|  P.Mode  |  Picture / Format |
|  S.Mode  |  Sound / Title    |
|  Sleep   |  Sleep / Timer    |

| Original   | Substitut   |
|--|---|
|  Menu       |  Menu / Home             |
|  Source     |  AV / Input / RDS        |
|  Up         |  Up                      |
|  Left       |  Left                    |
|  Enter      |  OK                      |
|  Right      |  Right                   |
|  Down       |  Down                    |
|  Exit       |  Exit / Cancel / Clear   |
|  Display    |  Display / Media         |
|  Vol+      |  Vol+                   |
|  Audio    |  Audio / Lang I/II     |
|  CH+      |  CH+ / Page+           |
|  Vol-     |  Vol-                  |
|  Rec.List |  Fav / Marker / PC     |
|  CH-      |  CH- / Page-           |
|  Rec      |  Rec / Rec Mode        |
|  Timer    |  Shift + Sleep / Timer |





 







| Original  | Substitut   |
|---|---|
|  Timeshift         |  Setup / OPT /               |
|  <<                |  << / Tune-                  |
|  >>                |  >> / Tune+                  |
|  I<<               |  I<< / Preset-               |
|  >>I / Sub.Pg      |  >>I / Preset+               |
|  Stop / Hold       |  Stop / Hold                 |
|  Play/Pause / Size |  Pause / Step / Freeze       |
|  Play/Pause / Size |  Play / Slow                 |
|  Index             |  Info / Angle                |
|  Subtitle         |  Subtitle / EQ              |
|  TV/Radio        |  TV/Radio /                |
|  Aspect          |  Zoom / Size               |
|  Reveal          |  D.Menu / Top              |
|  Text            |  Text / Goto               |
|  Red             |  Red / Netflix / Search    |
|  Green           |  Green / APP / Repeat      |
|  Yellow          |  Yellow / YouTube / Repeat |

| Original   | Substitut   |
|--|---|
|  Blue |  Blue / Prime Video / Random |







| Original  | Substitut  |
|---|--|
|  Power     |  Power              |
|  Mute      |  Mute / Dimmer      |
|  1         |  1                  |
|  2         |  2                  |
|  3         |  3                  |
|  4         |  4                  |
|  5         |  5                  |
|  6         |  6                  |
|  7         |  7                  |
|  8        |  8                 |
|  9       |  9                |
|  CH.List |  Smart / List     |
|  0       |  0                |
|  Recall  |  Back / Return    |
|  P.Mode  |  Picture / Format |
|  S.Mode  |  Sound / Title    |
|  Sleep   |  Sleep / Timer    |

| Original   | Substitut   |
|--|---|
|  Menu       |  Menu / Home             |
|  Source     |  AV / Input / RDS        |
|  Up         |  Up                      |
|  Left       |  Left                    |
|  Enter      |  OK                      |
|  Right      |  Right                   |
|  Down       |  Down                    |
|  Exit       |  Exit / Cancel / Clear   |
|  Display    |  Display / Media         |
|  Vol+      |  Vol+                   |
|  Audio    |  Audio / Lang I/II     |
|  CH+      |  CH+ / Page+           |
|  Vol-     |  Vol-                  |
|  Rec List |  Fav / Marker / PC     |
|  CH-      |  CH- / Page-           |
|  Rec      |  Rec / Rec Mode        |
|  Timer    |  Shift + Sleep / Timer |





| Original   | Substitut   |
|--|---|
|  Timeshift  |  Setup / OPT /               |
|  <<         |  << / Tune-                  |
|  >>         |  >> / Tune+                  |
|  I<<        |  I<< / Preset-               |
|  >>I/Sub.Pg |  >>I / Preset+               |
|  Stop/Hold  |  Stop / Hold                 |
|  Pause/size |  Pause / Step / Freeze       |
|  Play       |  Play / Slow                 |
|  Index      |  Info / Angle                |
|  Subtitle  |  Subtitle / EQ              |
|  Tv/Radio |  TV/Radio /                |
|  Aspect   |  Zoom / Size               |
|  Reveal   |  D.Menu / Top              |
|  Text     |  Text / Goto               |
|  Red      |  Red / Netflix / Search    |
|  Green    |  Green / APP / Repeat      |
|  Yellow   |  Yellow / YouTube / Repeat |

| Original   | Substitut   |
|--|---|
|  Blue |  Blue / Prime Video / Random |

