
















 



 









 



 
 
 

 
 



 


 

 
 

 
 


 

 









Original	Substitut	Original	Substitut
 Power On	 Power	 Stop	 Stop
 Standby	 Shift + Power	 </Pause	 Pause
 Input	 AV	 >> /Preset+	 >>
 Mute	 Mute	 <</Preset-	 <<
 Vol Up	 Shift + Right	 >>/Tune+	 >>
 Vol Down	 Shift + Left	 <</Tune-	 <<
 Volume+	 Vol +	 Setup/Home	 Media
 Volume-	 Vol -	 Test/Disc Menu	 Menu
 T/V/CH Level	 Smart	 Dimmer/Return	 Back
 CH/Album Up	 Ch +	 Display	 Info
 CH/Album Down	 Ch -	 RDM/Room2	 Exit
 Up	 Up	 Audio	 Options
 Down/Search	 Down	 Surround/Play List >	 Green
 Sel >	 Right	 < Surround/Play List	 Red
 < Sel	 Left	 Stereo/Play M	 TV/R
 Enter	 Ok	 1 / Tuner	 1
 Play	 Play	 2 / CD	 2






 



 

 
 




 



 





 

 

 

 

 

 



 
 




 


 




 






	Original	Substitut		
F.AUX	3 / F.Aux	3	3	
TAPE	4 / Tape	4	4	
BT IN	5 / BT In	5	5	
VIDEO 1	6 / Video 1	6	6	
VIDEO 2	7 / Video 2	7	7	
VIDEO 3	8 / Video 3	8	8	
	9	9	9	
	0	0	0	
	10	+10		
EXT.IN	Ext In	D	Blue	
SLEEP	Sleep	PROG SLEEP	Sleep	
AVR	AVR	SHIFT + 1	Shift + 1	
RECALL DOCK	Dock	SHIFT + 2	Shift + 2	
SELECT CD	CD	SHIFT + 3	Shift + 3	
AUX	AUX	SHIFT + 4	Shift + 4	
BD	BD	SHIFT + 5	Shift + 5	
TV	TV	SHIFT + 6	Shift + 6	

	Original	Substitut		
SAT	SAT	SHIFT + 7	Shift + 7	
CBL	CBL	SHIFT + 8	Shift + 8	









 








 









 

 
 





Original	Substitut	Original	Substitut
 Power On	 Power	 Audio	 Dual
 Standby	 Shift + Power	 Subtitle	 Subt
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right	 Right	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Setup/Home	 Media	 6	 6
 Test/Disc Menu	 Menu	 7	 7
 Play	 Play	 8	 8
 Stop	 Stop	 9	 9
 >>	 >>	 0	 0
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Display	 Info		
 Dimmer/Return	 Back		






	Original	Substitut		Original	Substitut
	CD		Power		
	Play		Play		
	Stop		Stop		
	Pause		Pause		
	I<<		I<<		
	>>I		>>I		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		





Original		Substitut		Original		Substitut	
	Power On		Power		Audio		Options
	Standby	 + 	Shift + Power		< Surround/Play List		Red
	RDM/Room2		Exit		Surround/Play List >		Green
	CH/Album Up		Ch +		Stereo/Play M		TV/R
	CH/Album Down		Ch -		Sleep / Dock M.		Sleep
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	<<		<<				
	I<<		I<<				
	>>I		>>I				
	Test/Disc Menu		Menu				
	Display		Info				
	Enter		Ok				
	Up		Up				
	Down		Down				

