
 
 
 

 


 
 


 

 

 


 

 

 
 
 


 
 





 
 


 



 








 

 




 






 




Original	Substitut	Original	Substitut
On/Off	 Power	Menu Left	 Left
Audio Off	 Mute	OK Enter	 Ok
Slow Down	 Ch -	Progr.	 Sleep
Slow Up	 Ch +	Next	 >>
Pause	 Pause	Menu Right	 Right
Auto/Track	 Smart	Prev.	  <<
Stop	 Stop	Menu Down	 Down
Subt.	 Subt	Volume+	 Vol +
Title	 List	Volume-	 Vol -
Rep/A-B	 TV/R	Top Menu	 D. Menu
Pepeat/1/All	 Text	1	 1
Zoom	 Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	Store	 Red
Return	 Back	6	 6

 

 
 
 
 









Original	Substitut	Original	Substitut
Digest	 Green	Angle	 Format
7	 7	Np	 +  Shift + Subt
Open/Close	 Eject	Info	 +  Shift + Info
8	 8		
9	 9		
Clear/00:00	 Exit		
+10	 Guide		
Record	 Rec		
Auto Scan	 Media		
Rewind	 <<		
Play	 Play		
F.Forward	 >>		
Setup	 Options		
Audio	 Dual		
3D	 3D		
0	 0		
C/CH	 Pre Ch		


 



 

 




 





 

 


 


 
 



 




Original	Substitut	Original	Substitut
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Stop	 Stop	Return	 Exit
Pause	 Pause	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Slow Down	 Ch -	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Auto/Track	 Sleep	Next	 >>
Rep/A-B	 TV/R	Volume-	 Vol -
Zoom	 +  Shift + Eject	1	 1
Title	 List	2	 2
Pepeat/1/All	 Text	3	 3
DVD/TV	 AV	Prev.	  <<
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Substitut	Original	Substitut
8		8	
Video			
9		9	
+10			
0		0	
C/CH			
Rewind		<<	
Random			
Angle			
R/L	 + 	Shift + Info	
Play		Play	
Record		Rec	
F.Forward		>>	
3D		3D	
Open/Close		Eject	
Audio		Dual	



Original	Substitut	Original	Substitut
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Back
Slow Up	 Ch +	Menu Down	 Down
Auto/Track	 Smart	Next	 >>
Stop	 Stop	Progr.	 Sleep
Subt.	 Subt	Volume+	 Vol +
Pause	 Pause	Top Menu	 D. Menu
Zoom	 Shift + Eject	Volume-	 Vol -
Title	 List	Prev.	  <<
Rep/A-B	 TV/R	1	 1
Pepeat/1/All	 Text	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Substitut	Original	Substitut
8		8	
Open/Close		Eject	
Mode		Media	
9		9	
Setup		Options	
+10		Guide	
3D		3D	
0		0	
C/CH		Pre Ch	
Play/Back	 + 	Shift + Left	
Resume	 + 	Shift + Play	
Play		Play	
Karaoke/Step	 + 	Shift + Pause	
Np	 + 	Shift + Subt	
Record		Rec	
F.Forward		>>	
Rewind		<<	
Store	 + 	Shift + Down	
Angle		Format	
Lang		Dual	

