



Original		Substitut		Original		Substitut	
	Power On		Power		2		2
	Power Off		Shift + Power		3		3
	Mute		Mute		4		4
	Stereo		Shift + Dual		5		5
	Cable/Sat		Green		6		6
	TV		Blue		7		7
	CD		Yellow		8		8
	Menu		Menu		9		9
	Harman Volume		Smart		0		0
	Exit		Exit		Clear		Shift + Exit
	Tone Control		Back		Direct		Guide
	Up		Up		Vol+		Vol +
	Down		Down		Vol-		Vol -
	Right		Right		CH/Tuner Up		Ch +
	Left		Left		CH/Tuner Down		Ch -
	OK		Ok		Speaker 1		Options
	1		1		Speaker 2		Dual





Original	Substitut	Original	Substitut
Power On	Power	2	2
Power Off	Shift + Power	3	3
Mute	Mute	4	4
Stereo	Shift + Dual	5	5
Cable/SAT	Green	6	6
TV	Blue	7	7
CD	Yellow	8	8
Menu	Menu	9	9
Harman Volume	Smart	0	0
Exit	Exit	Clear	Shift + Exit
Tone Control	Back	Direct	Guide
Up	Up	Vol+ Stereo	Vol +
Down	Down	Vol- Stereo	Vol -
Right	Right	CH/Tuner Down	Ch +
Left	Left	CH/Tuner Up	Ch -
OK	Ok	Speaker 1	Options
1	1	Speaker 2	Dual





Original		Substitut		Original		Substitut	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<<				
	>>		>>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

