



Original	Substitut	Original	Substitut
	Power		Power
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Mute		Mute / Dimmer
	0		0
	Recall		Back / Return
	Subtl		Subtitle / EQ
	V.O.		Sound / Title
	←		Eject / Surround

Original	Substitut	Original	Substitut
	Vol+		Vol+
	Home		Shift + Menu /
	P+		CH+ / Page+
	Vol-		Vol-
	Movie		Display / Media
	P-		CH- / Page-
	Mouse		Smart / List
	♪		D.Menu / Top
	16:9		Picture / Format
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Info		Info / Angle
	Down		Down





Original	Substitut
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<</[≡i]	<< / Tune-
Play	Play / Slow
Pause/[≡◇]	Pause / Step / Freeze
>>/[≡?]	>> / Tune+
<</[≡o]	<< / Preset-
Stop/[≡+]	Stop / Hold
>> /[≡x]	>>  / Preset+
Rec	Rec / Rec Mode
[ /≡]	Zoom / Size
FAV	Fav / Marker / PC
EPG	Guide / EPG / -/--
Tv/Radio	TV/Radio /

Original	Substitut
USB	Shift + 8



Program