





 





Original	Substitut
	 Power
	 Mute / Dimmer
	 Sleep / Timer
	 Guide / EPG / -/-
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto

Original	Substitut
	 Smart / List
	 Display / Media
	 Shift + Stop /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 0
	 Shift + 4
	 Info / Angle
	 CH+ / Page+





Original	Substitut	Original	Substitut
Vol+	Vol+		
CH-	CH- / Page-		
Vol-	Vol-		
[+]/Aspect	Picture / Format		
N	D.Menu / Top		
Power VCR	Shift + Power		
Rec VCR	Rec / Rec Mode		
Programme Down	Shift + CH- /		
Programme Up	Shift + CH+ /		
<< VCR	<< / Tune-		
>> VCR	>> / Tune+		
Stop VCR	Stop / Hold		
Pause/Step VCR	Pause / Step / Freeze		
Play VCR	Play / Slow		

Original	Substitut





Original	Substitut	Original	Substitut
 Power DVD	 Power		
 Rec DVD	 Rec / Rec Mode		
 Programme Down	 CH- / Page-		
 Programme Up	 CH+ / Page+		
 I<< DVD	 I<< / Preset-		
 >>I DVD	 >>I / Preset+		
 Stop DVD	 Stop / Hold		
 Pause/Step DVD	 Pause / Step / Freeze		
 Play DVD	 Play / Slow		

