






 








 



 

 

 













 

 

 

 









 





Original	Substitut	Original	Substitut
	Audio		Audio / Lang I/II
	[]		Picture / Format
	Power		Power
	PIP		Zoom / Size
	V=		D.Menu / Top
	[≡]		Guide / EPG / -/--
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Pause/T		Pause / Step / Freeze
	M		Menu / Home
	E		Exit / Cancel / Clear
	Info		Info / Angle
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat









 



 

 





 

 

 
















 



 







 





Original		Substitut		Original		Substitut	
	Audio		Audio / Lang I/II		0		0
	[]		Picture / Format		Pause/T		Pause / Step / Freeze
	Power		Power		M		Menu / Home
	SV/[*]		Zoom / Size		E		Exit / Cancel / Clear
	LP/V=		Setup / OPT /		Rec/i		Info / Angle
	000/[≡I]		Guide / EPG / -/--		Up		Up
	Timer/Mute		Sleep / Timer		Left		Left
	Timer/Mute		Mute / Dimmer		OK		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		<<		<< / Tune-
	4		4		>>		>> / Tune+
	5		5		Stop		Stop / Hold
	6		6		Play		Play / Slow
	7		7				
	8		8				
	9		9				





Original	Substitut	Original	Substitut
	Audio		Audio / Lang I/II
	[]		Picture / Format
	Power		Power
	SV		Display / Media
	LP		Smart / List
	Timer		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	000		0
	M		Menu / Home
	E		Exit / Cancel / Clear
	Rec		Rec / Rec Mode
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Play		Play / Slow

