









 










 








Original	Substitut
	 Eject / Surround
	 Power
	 Display / Media
	 Picture / Format
	 Audio / Lang I/II
	 Smart / List
	 Exit / Cancel / Clear
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9

Original	Substitut
	 Guide / EPG / -/--
	 0
	 AV / Input / RDS
	 Vol+
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 Rec / Rec Mode
	 Shift + Slow Play /
	 Shift + Tune+ >> /
	 D.Menu / Top
	 I<< / Preset-
	 >>I / Preset+
	 Menu / Home
	 Up
	 Pause / Step / Freeze
	 Sleep / Timer





Original	Substitut
	Left
	<< / Tune-
	OK
	Play / Slow
	Right
	>> / Tune+
	Down
	Stop / Hold

Original	Substitut





Original	Substitut
Power	Power
Display	Display / Media
Format	Picture / Format
Audio Monitor	Audio / Lang I / II
TV / Video	TV / Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
-/-	Guide / EPG / -/-
0	0
Vol+	Vol+

Original	Substitut
Prog+	CH+ / Page+
Vol-	Vol-
Prog-	CH- / Page-

