


 

 
 
 
 
 
 




 

 
 












Original	Substitut
	Power
	Tv/Text
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV/Input Select
	-/--
	Tracking/V-Lock+
	Tracking/V-Lock-
	Vol+

Original	Substitut
	Vol-
	Search
	Show View
	OSD/Display
	Replay
	Direct Tv Rec
	I<< Index
	Index >>I
	Rec
	Pause/Step
	Menu
	OK
	Play/Up
	Stop/Down
	>>/Right
	<</Left
	SP/LP

 





 








Original		Substitut		Original		Substitut	
	Timer Rec		3D		Exit		Exit
	Prog/Check		Sleep				
	Reset		Back				
	Audio		Dual				
	VPS/PDC		Subt				
	AV Link		Media				
	TV Aspect		Eject				
	Still Album		List				
	Up		Up				
	Down		Down				
	Date+		Right				
	Date-		Left				
	On+		Red				
	On-		Green				
	Off+		Yellow				
	Off-		Blue				
	Cancel		D. Menu				





Original	Substitut
	
Power	Power
	
TV/Text	Text
	
CH+	Ch +
	
CH-	Ch -
	
Vol+	Vol +
	
Vol-	Vol -
	
1	1
	
2	2
	
3	3
	
4	4
	
5	5
	
6	6
	
7	7
	
8	8
	
9	9
	
0	0
	
-/--	Guide

Original	Substitut
	
AV Input Select	AV
	
Red	Red
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue

