



Original		Substitut		Original		Substitut	
	Power Receiver		Power		Loudness		Subtitle / EQ
	Input Sel		AV / Input / RDS		Test Tone		Text / Goto
	Standard		Sound / Title		Left/ST-		Left
	Stereo		Audio / Lang I/II		Right/ST+		Right
	ADV Surr.		Eject / Surround		CH Select		Smart / List
	Master		Vol+		Midnight		Sleep / Timer
	Master Volume-		Vol-		ATT		D.Menu / Top
	Enter		OK		Signal Select		Menu / Home
	Remote Setup		Setup / OPT /		CH Level+		CH+ / Page+
	Effect-		I<< / Preset-		CH Level-		CH- / Page-
	Effect+		>>I / Preset+		TV		1
	Mute		Mute / Dimmer		CD-R		3
	DVD		2		Power TV		Shift + Power
	VCR		4		1 Tv		Shift + 1
	TUN		6		2 Tv		Shift + 2
	Up/Tune+		Up		3 Tv		Shift + 3
	Down/Tune-		Down		4 Tv		Shift + 4





Original	Substitut
5 Tv	+ Shift + 5
6 Tv	+ Shift + 6
7 Tv	+ Shift + 7
9 Tv	+ Shift + 9
8 Tv	+ Shift + 8
0 Tv	+ Shift + 0
+10 Tv	+ Shift + Guide / EPG / -/-
Menu Tv	+ Shift + Menu /
Tv Input	+ Shift + AV / Input / RDS
Tv Vol+	+ Shift + Vol+
Tv Vol-	+ Shift + Vol-
Channel + Tv	+ Shift + CH+ /
Channel - Tv	+ Shift + CH- /
Up Tv	+ Shift + Up
Down Tv	+ Shift + Down
Enter Tv	+ Shift + OK
Right Tv	+ Shift + Right

Original	Substitut
Left Tv	+ Shift + Left
Pause/T.Edit Tv	+ Shift + Pause / Step /
Play/D.Access Tv	+ Shift + Play /
Stop/MPX Tv	+ Shift + Stop /
>>/RF ATT Tv	+ Shift + >>I / Preset+
I<</Display Tv	+ Shift + I<< / Preset-
>>/Class Tv	+ Shift + >> /
<</Band Tv	+ Shift + << /
Rec Tv	+ Shift + Rec / Rec Mode
Disc Tv	+ Shift + Fav / Marker / PC





Original	Substitut
Power DVD	Power
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Top Menu	D.Menu / Top
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
7 DVD	7
8 DVD	8
9 DVD	9
0 DVD	0
+10 DVD	Guide / EPG / -/--
Disc DVD	Fav / Marker / PC

Original	Substitut
Menu DVD	Menu / Home
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
Channel+ DVD	CH+ / Page+
Channel- DVD	CH- / Page-
Up DVD	Up
Down DVD	Down
Right DVD	Right
Left DVD	Left
Enter DVD	OK
Pause DVD	Pause / Step / Freeze
Rec DVD	Rec / Rec Mode
Play DVD	Play / Slow
<< DVD	<< / Tune-
>> DVD	>> / Tune+
Stop DVD	Stop / Hold



 



 



 


 
 



 



 



 



 



 









 

 



 

 
 


 

 

 











Original	Substitut
>>I DVD	>>I / Preset+
I<< DVD	I<< / Preset-
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Fav / Marker / PC
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up

Original	Substitut
Down VCR	Shift + Down
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode





Original		Substitut		Original		Substitut	
	Power CD		Power		Channel- CD		CH- / Page-
	1 CD		1		Up CD		Up
	2 CD		2		Down CD		Down
	3 CD		3		Right CD		Right
	4 CD		4		Left CD		Left
	5 CD		5		Enter CD		OK
	6 CD		6		Pause CD		Pause / Step / Freeze
	7 CD		7		Play CD		Play / Slow
	8 CD		8		<< CD		<< / Tune-
	9 CD		9		>> CD		>> / Tune+
	0 CD		0		Stop CD		Stop / Hold
	+10 CD		Guide / EPG / -/--		I<< CD		I<< / Preset-
	Disc CD		Fav / Marker / PC		>>I CD		>>I / Preset+
	Master		Vol+		Power TVC		Shift + Power
	Master Volume-		Vol-		1 TVC		Shift + 1
	Mute		Mute / Dimmer		2 TVC		Shift + 2
	Channel+ CD		CH+ / Page+		3 TVC		Shift + 3





 







 



 

 







 

















 






 
 

 



 
 
 
 
 
 


 

 



Original	Substitut		
4 CH SELECT	4 TVC	SHIFT + VIDEO 4	Shift + 4
5 - LEVEL	5 TVC	SHIFT + TAPE 5	Shift + 5
6 LEVEL +	6 TVC	SHIFT + TUNER 6	Shift + 6
7	7 TVC	SHIFT + AUX - HDD 7	Shift + 7
8 - EFFECT	8 TVC	SHIFT + USB 8	Shift + 8
9 EFFECT +	9 TVC	SHIFT + BLUETOOTH 9	Shift + 9
0	0 TVC	SHIFT + HDMI - SAT 0	Shift + 0
+10	+10 TVC	SHIFT + GUIDE EPG	Shift + Guide / EPG / -/-
DISC	Disc TVC	SHIFT + PC FAV MARKER	Shift + Fav / Marker / PC
MENU	Menu TVC	SHIFT + HOME MENU	Shift + Menu /
TUNE ↑	Up TVC	SHIFT + TUNE ↑	Shift + Up
TUNE ↓	Down TVC	SHIFT + TUNE ↓	Shift + Down
ST- →	Right TVC	SHIFT + ST- →	Shift + Right
ST- ←	Left TVC	SHIFT + ST- ←	Shift + Left
ENTER	Enter TVC	SHIFT + OK	Shift + OK
T.EDIT	Pause TVC	SHIFT + STEP - FREEZE	Shift + Pause / Step /
RECORD	Rec TVC	SHIFT + REC MODE	Shift + Rec / Rec Mode

Original	Substitut		
D.ACCESS	Play TVC	SHIFT + SLOW	Shift + Play /
MPX	Stop TVC	SHIFT + HOLD	Shift + Stop /
BAND	<< TVC	SHIFT + TUNE-	Shift + << /
CLASS	>> TVC	SHIFT + TUNE+	Shift + >> /
RF ATT	>>I TVC	SHIFT + PRESET+	Shift + >>I / Preset+
DISPLAY	I<< TVC	SHIFT + PRESET-	Shift + I<< / Preset-





Original	Substitut
 Power TUN	 Power
 1 TUN	 1
 2 TUN	 2
 3 TUN	 3
 4 TUN	 4
 5 TUN	 5
 6 TUN	 6
 7 TUN	 7
 8 TUN	 8
 9 TUN	 9
 0 TUN	 0
 Master	 Vol+
 Master volume-	 Vol-
 Mute	 Mute / Dimmer
 TUNE+ TUN	 >> / Tune+
 TUNE- TUN	 << / Tune-
 ST+ TUN	 >>I / Preset+

Original	Substitut
 ST- TUN	 I<< / Preset-
 D.Access TUN	 Play / Slow
 Band TUN	 Pause / Step / Freeze
 Class TUN	 Stop / Hold
 MPX TUN	 Rec / Rec Mode
 Display TUN	 Display / Media
 RF ATT TUN	 Smart / List
 Power CDR	 Shift + Power
 1 CDR	 Shift + 1
 2 CDR	 Shift + 2
 3 CDR	 Shift + 3
 4 CDR	 Shift + 4
 5 CDR	 Shift + 5
 6 CDR	 Shift + 6
 7 CDR	 Shift + 7
 8 CDR	 Shift + 8
 9 CDR	 Shift + 9



