



Original		Substitut		Original		Substitut	
	Power Receiver		Power		Loudness		Subtitle / EQ
	Input Sel		AV / Input / RDS		Test Tone		Text / Goto
	Standard		Sound / Title		Left/ST-		Left
	Stereo		Audio / Lang I/II		Right/ST+		Right
	ADV Surr.		Eject / Surround		CH Select		Smart / List
	Master		Vol+		Midnight		Sleep / Timer
	Master Volume-		Vol-		ATT		D.Menu / Top
	Enter		OK		Signal Select		Menu / Home
	Remote Setup		Setup / OPT /		CH Level+		CH+ / Page+
	Effect-		I<< / Preset-		CH Level-		CH- / Page-
	Effect+		>>I / Preset+		TV		1
	Mute		Mute / Dimmer		CD-R		3
	DVD		2		Power TV		Shift + Power
	VCR		4		1 Tv		Shift + 1
	TUN		6		2 Tv		Shift + 2
	Up/Tune+		Up		3 Tv		Shift + 3
	Down/Tune-		Down		4 Tv		Shift + 4





Original	Substitut
5 Tv	+  Shift + 5
6 Tv	+  Shift + 6
7 Tv	+  Shift + 7
9 Tv	+  Shift + 9
8 Tv	+  Shift + 8
0 Tv	+  Shift + 0
+10 Tv	+  Shift + Guide / EPG / -/-
Menu Tv	+  Shift + Menu /
Tv Input	+  Shift + AV / Input / RDS
Tv Vol+	+  Shift + Vol+
Tv Vol-	+  Shift + Vol-
Channel + Tv	+  Shift + CH+ /
Channel - Tv	+  Shift + CH- /
Up Tv	+  Shift + Up
Down Tv	+  Shift + Down
Enter Tv	+  Shift + OK
Right Tv	+  Shift + Right

Original	Substitut
Left Tv	+  Shift + Left
Pause/T.Edit Tv	+  Shift + Pause / Step /
Play/D.Access Tv	+  Shift + Play /
Stop/MPX Tv	+  Shift + Stop /
>>I/RF ATT Tv	+  Shift + >>I / Preset+
I<</Display Tv	+  Shift + I<< / Preset-
>>/Class Tv	+  Shift + >> /
<</Band Tv	+  Shift + << /
Rec Tv	+  Shift + Rec / Rec Mode
Disc Tv	+  Shift + Fav / Marker / PC





Original	Substitut
Power DVD	Power
Angle	Info / Angle
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Top Menu	D.Menu / Top
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
7 DVD	7
8 DVD	8
9 DVD	9
0 DVD	0
+10 DVD	Guide / EPG / -/--
Disc DVD	Fav / Marker / PC

Original	Substitut
Menu DVD	Menu / Home
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer
Channel+ DVD	CH+ / Page+
Channel- DVD	CH- / Page-
Up DVD	Up
Down DVD	Down
Right DVD	Right
Left DVD	Left
Enter DVD	OK
Pause DVD	Pause / Step / Freeze
Rec DVD	Rec / Rec Mode
Play DVD	Play / Slow
<< DVD	<< / Tune-
>> DVD	>> / Tune+
Stop DVD	Stop / Hold

 


 



 


 
 






 



 


 


 










 



 

 
 

 

 

 












Original		Substitut		Original		Substitut	
	>>I DVD		>>I / Preset+		Down VCR	+	Shift + Down
	I<< DVD		I<< / Preset-		Right VCR	+	Shift + Right
	Power VCR	+	Shift + Power		Left VCR	+	Shift + Left
	1 VCR	+	Shift + 1		Enter VCR	+	Shift + OK
	2 VCR	+	Shift + 2		Pause VCR	+	Shift + Pause / Step /
	3 VCR	+	Shift + 3		Play VCR	+	Shift + Play /
	4 VCR	+	Shift + 4		Stop VCR	+	Shift + Stop /
	5 VCR	+	Shift + 5		<< VCR	+	Shift + << /
	6 VCR	+	Shift + 6		>>I VCR	+	Shift + >>I / Preset+
	7 VCR	+	Shift + 7		>> VCR	+	Shift + >> /
	8 VCR	+	Shift + 8		I<< VCR	+	Shift + I<< / Preset-
	9 VCR	+	Shift + 9		Rec VCR	+	Shift + Rec / Rec Mode
	0 VCR	+	Shift + 0				
	Disc VCR	+	Shift + Fav / Marker / PC				
	Channel+ VCR	+	Shift + CH+ /				
	Channel- VCR	+	Shift + CH- /				
	Up VCR	+	Shift + Up				





Original	Substitut	Original	Substitut
 Power CD	 Power	 Channel- CD	 CH- / Page-
 1 CD	 1	 Up CD	 Up
 2 CD	 2	 Down CD	 Down
 3 CD	 3	 Right CD	 Right
 4 CD	 4	 Left CD	 Left
 5 CD	 5	 Enter CD	 OK
 6 CD	 6	 Pause CD	 Pause / Step / Freeze
 7 CD	 7	 Play CD	 Play / Slow
 8 CD	 8	 << CD	 << / Tune-
 9 CD	 9	 >> CD	 >> / Tune+
 0 CD	 0	 Stop CD	 Stop / Hold
 +10 CD	 Guide / EPG / -/--	 I<< CD	 I<< / Preset-
 Disc CD	 Fav / Marker / PC	 >>I CD	 >>I / Preset+
 Master	 Vol+	 Power TVC	 Shift + Power
 Master Volume-	 Vol-	 1 TVC	 Shift + 1
 Mute	 Mute / Dimmer	 2 TVC	 Shift + 2
 Channel+ CD	 CH+ / Page+	 3 TVC	 Shift + 3





 







 



 

 







 


















 

 
 





Original	Substitut
4 TVC	Shift + 4
5 TVC	Shift + 5
6 TVC	Shift + 6
7 TVC	Shift + 7
8 TVC	Shift + 8
9 TVC	Shift + 9
0 TVC	Shift + 0
+10 TVC	Shift + Guide / EPG / -/-
Disc TVC	Shift + Fav / Marker / PC
Menu TVC	Shift + Menu /
Up TVC	Shift + Up
Down TVC	Shift + Down
Right TVC	Shift + Right
Left TVC	Shift + Left
Enter TVC	Shift + OK
Pause TVC	Shift + Pause / Step /
Rec TVC	Shift + Rec / Rec Mode

Original	Substitut
Play TVC	Shift + Play /
Stop TVC	Shift + Stop /
<< TVC	Shift + << /
>> TVC	Shift + >> /
>>I TVC	Shift + >>I / Preset+
I<< TVC	Shift + I<< / Preset-





Original	Substitut
 Power TUN	 Power
 1 TUN	 1
 2 TUN	 2
 3 TUN	 3
 4 TUN	 4
 5 TUN	 5
 6 TUN	 6
 7 TUN	 7
 8 TUN	 8
 9 TUN	 9
 0 TUN	 0
 Master	 Vol+
 Master volume-	 Vol-
 Mute	 Mute / Dimmer
 TUNE+ TUN	 >> / Tune+
 TUNE- TUN	 << / Tune-
 ST+ TUN	 >>I / Preset+

Original	Substitut
 ST- TUN	 I<< / Preset-
 D.Access TUN	 Play / Slow
 Band TUN	 Pause / Step / Freeze
 Class TUN	 Stop / Hold
 MPX TUN	 Rec / Rec Mode
 Display TUN	 Display / Media
 RF ATT TUN	 Smart / List
 Power CDR	 Shift + Power
 1 CDR	 Shift + 1
 2 CDR	 Shift + 2
 3 CDR	 Shift + 3
 4 CDR	 Shift + 4
 5 CDR	 Shift + 5
 6 CDR	 Shift + 6
 7 CDR	 Shift + 7
 8 CDR	 Shift + 8
 9 CDR	 Shift + 9





Original	Substitut
0 CDR	Shift + 0
+10 CDR	Shift + Guide / EPG / -/-
Channel+ CDR	Shift + CH+ /
Channel- CDR	Shift + CH- /
Up CDR	Shift + Up
Down CDR	Shift + Down
Right CDR	Shift + Right
Left CDR	Shift + Left
Enter CDR	Shift + OK
Pause CDR	Shift + Pause / Step /
Play CDR	Shift + Play /
Stop CDR	Shift + Stop /
<< CDR	Shift + << /
Rec CDR	Shift + Rec / Rec Mode
>> CDR	Shift + >> /
I<< CDR	Shift + I<< / Preset-
>>I CDR	Shift + >>I / Preset+

Original	Substitut

