




 









 




 










Original	Substitut	Original	Substitut
 Power	 Power	 Volume+	 Vol+
 CBL/SAT	 1	 Volume-	 Vol-
 DVD	 2	 Mute	 Mute / Dimmer
 Blu-ray	 5	 Info	 Info / Angle
 Game	 4	 Option	 Shift + Setup / OPT / Tools
 Media Player	 0	 Back	 Back / Return
 CD	 3	 Setup	 Setup / OPT /
 Phono	 7	 Up	 Up
 Tv/Audio	 Guide / EPG / -/--	 Down	 Down
 Tuner	 6	 Right	 Right
 USB	 8	 Left	 Left
 Bluetooth	 9	 Enter	 OK
 Internet Radio	 Fav / Marker / PC	 Play	 Play / Slow
 Smart / List	 Smart / List	 I<</Tune-	 I<< / Preset-
 CH/Page+	 CH+ / Page+	 Pause	 Pause / Step / Freeze
 CH/Page-	 CH- / Page-	 >>I/Tune+	 >>I / Preset+
Eco	Display / Media	<</Band	<< / Tune-

Original	Substitut	Original	Substitut
 Power	 Power	 Volume+	 Vol+
 CBL/SAT	 1	 Volume-	 Vol-
 DVD	 2	 Mute	 Mute / Dimmer
 Blu-ray	 5	 Info	 Info / Angle
 Game	 4	 Option	 Shift + Setup / OPT / Tools
 Media Player	 0	 Back	 Back / Return
 CD	 3	 Setup	 Setup / OPT /
 Phono	 7	 Up	 Up
 Tv/Audio	 Guide / EPG / -/--	 Down	 Down
 Tuner	 6	 Right	 Right
 USB	 8	 Left	 Left
 Bluetooth	 9	 Enter	 OK
 Internet Radio	 Fav / Marker / PC	 Play	 Play / Slow
 Smart / List	 Smart / List	 I<</Tune-	 I<< / Preset-
 CH/Page+	 CH+ / Page+	 Pause	 Pause / Step / Freeze
 CH/Page-	 CH- / Page-	 >>I/Tune+	 >>I / Preset+
Eco	Display / Media	<</Band	<< / Tune-











 



 




























 




Original	Substitut	Original	Substitut
Stop/Mode	Stop / Hold		
>>/Memory	>> / Tune+		
Quick Select 1	Red / Netflix / Search		
Quick Select 2	Green / APP / Repeat		
Quick Select 3	Yellow / YouTube / Repeat		
Quick Select 4	Blue / Prime Video / Random		
Speaker	TV/Radio /		
Sleep	Sleep / Timer		
Dimmer	Shift + Mute / Dimmer		
Sound Mode	Audio / Lang I/II		





Original	Substitut	Original	Substitut
 Power	 Power	 Volume-	 Vol-
 CBL/SAT	 1	 Mute	 Mute / Dimmer
 DVD	 2	 Back	 Back / Return
 Blu-ray	 5	 Up	 Up
 Game	 4	 Down	 Down
 CD	 3	 Right	 Right
 Media Player	 0	 Left	 Left
 Phono	 7	 Enter	 OK
 Tv/Audio	 Guide / EPG / -/--	 Play	 Play / Slow
 Tuner	 6	 I<</Tune-	 I<< / Preset-
 USB	 8	 Pause	 Pause / Step / Freeze
 Bluetooth	 9	 >>I/Tune+	 >>I / Preset+
 Internet Radio	 Fav / Marker / PC	 <</Band	 << / Tune-
 .: .:	 Smart / List	 Stop/Mode	 Stop / Hold
 CH/Page+	 CH+ / Page+	 >>/Memory	 >> / Tune+
 CH/Page-	 CH- / Page-	 Quick Select 1	 Red / Netflix / Search
 Volume+	 Vol+	 Quick Select 2	 Green / APP / Repeat

Original	Substitut	Original	Substitut
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original		Substitut		Original		Substitut	
	Quick Select 3		Yellow / YouTube / Repeat				
	Quick Select 4		Blue / Prime Video / Random				
	Sleep		Sleep / Timer				

