



Original	Substitut	Original	Substitut
	?		0
	Power		Q.View
	TV/Rad		Settings
	Guide		Up
	Info		Q.Menu
	Ratio		Left
	Input		OK
	1		Right
	2		Back
	3		Down
	4		Exit
	5		Vol+
	6		Fav
	7		P+
	8		Vol-
	9		AD
	List		P-
	Zoom / Size		0
	Power		Display / Media
	TV/Radio /		Setup / OPT /
	Guide / EPG / -/--		Menu / Home
	Info / Angle		Back / Return
	Picture / Format		Exit / Cancel / Clear
	AV / Input / RDS		Vol+
	1		Fav / Marker / PC
	2		CH+ / Page+
	3		Audio / Lang I/II
	4		CH- / Page-
	5		
	6		
	7		
	8		
	9		
	Smart / List		





	Original	Substitut	Original	Substitut
	Mute	Mute / Dimmer		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow / Brightness-	Yellow / YouTube / Repeat		
	Blue /	Blue / Prime Video / Random		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	Subtitle	Subtitle / EQ		
	<<	<< / Tune-		
	<<	<< / Preset-		
	>>	>> / Tune+		
	>>	>> / Preset+		
	Text	Text / Goto		
	T.Opt	D.Menu / Top		

