





























 



 







 

 

 



 



 

















Original	Substitut	Original	Substitut
	Power		Power
	Last Memory		TV/Radio /
	Conditon		Zoom / Size
	Open/Close		Eject / Surround
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	Menu		Menu / Home
	Top Menu		D.Menu / Top
	Repeat		Green / APP / Repeat
	Repeat A-B		Yellow / YouTube / Repeat
	Display		Display / Media
	Return		Back / Return
	I<</Prev		I<< / Preset-
	>>I/Next		>>I / Preset+
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<I/Step		CH- / Page-
	Slow I>		CH+ / Page+
	<</Rev		<< / Tune-
	>>/Fwd		>> / Tune+
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6





	Original	Substitut	Original	Substitut
7	7	AUX - HDD 7		
8	8	USB 8		
9	9	BLUETOOTH 9		
0	0	HDMI - SAT 0		
+10	+10	GUIDE EPG		Guide / EPG / -/-
CLEAR	Clear	CLEAR EXIT CANCEL		Exit / Cancel / Clear
RANDOM	Random	Prime Video RANDOM		Blue / Prime Video / Random
PROGRAM	Program	SHIFT + PROGRAM TV/RADIO		Shift + TV/Radio / Program
SEARCH MODE	Search Mode	NETFLIX SEARCH		Red / Netflix / Search

