 


Original	Substitut
Picture Mode	Picture / Format
DVD Status	Info / Angle
Dubbing	Yellow / YouTube / Repeat
VHS/DVD	Smart / List
Quick Replay	Red / Netflix / Search
Group	Zoom / Size
P.Memory	Fav / Marker / PC
Return	Back / Return
AV Enhancer	AV / Input / RDS
Direct Navigator / Top Menu	D.Menu / Top
Play List / Menu	Menu / Home
Play Mode	Shift + Play /
REW / << Slow/Search	<< / Tune-
FF / Slow/Search	>> / Tune+
VHS/DVD Power	Power
Pause / Slow	Pause / Step / Freeze
CH- / Tracking/V-Lock-	CH- / Page-

 
Original	Substitut
CH+ / Tracking/V-Lock+	CH+ / Page+
Cancel / Reset	Exit / Cancel / Clear
-/-- / >=10	Guide / EPG / -/--
Play	Play / Slow
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Display	Display / Media
Setup	Setup / OPT /
Timer	Sleep / Timer
0	0
Audio	Audio / Lang I/II
1	1
2	2
3	3

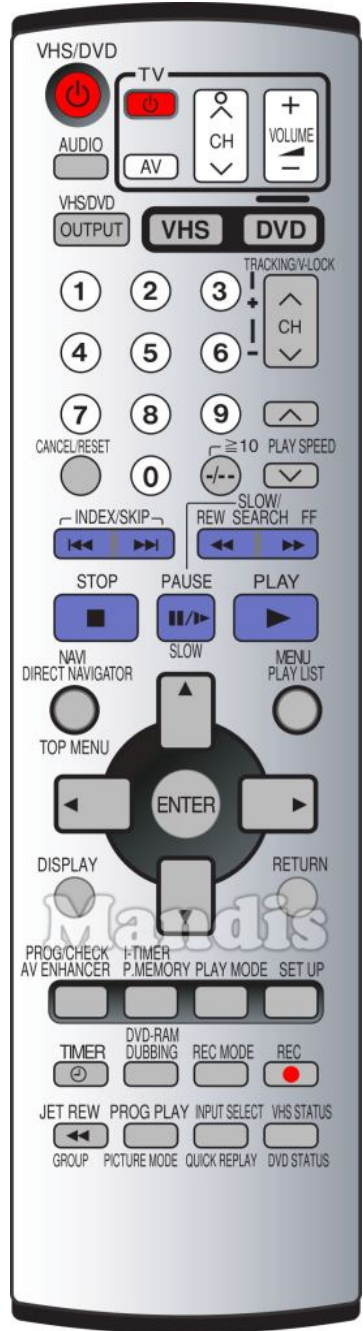



	Original	Substitut	Original	Substitut
4	4	VIDEO 4		
5	5	TAPE 5		
6	6	TUNER 6		
7	7	AUX - HDD 7		
8	8	USB 8		
9	9	BLUETOOTH 9		
INDEX/SKIP	I<< Skip	PRESET- I<< / Preset-		
SKIP	Skip >>I	PRESET+ >>I / Preset+		
STOP	Stop	HOLD Stop / Hold		

 


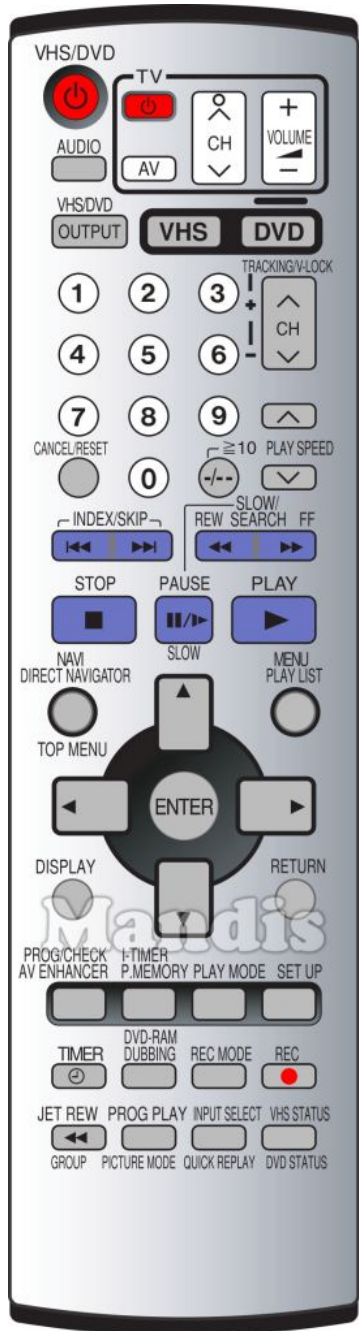

	Original	Substitut
	Prog Play	+  Shift + Play /
	I-Timer	+  Shift + Sleep / Timer
	Cancel / Reset	Exit / Cancel / Clear
	VHS/DVD	Smart / List
	Display	Display / Media
	VCR Status	Info / Angle
	Dubbing	Yellow / YouTube / Repeat
	Jet Rew	+  Shift + << /
	Pause / Slow	Pause / Step / Freeze
	CH+ / Tracking/V-Lock+	CH+ / Page+
	CH- / Tracking/V-Lock-	CH- / Page-
	VHS/DVD Power	Power
	-/-- / >=10	Guide / EPG / -/--
	Return	Back / Return
	Prog/Check	TV/Radio /
	I<< Index	I<< / Preset-
	Index >>I	>>I / Preset+

	Original	Substitut
	FF	>> / Tune+
	Play	Play / Slow
	Menu	Menu / Home
	Up	Up
	Left	Left
	Enter	OK
	Right	Right
	Down	Down
	Stop	Stop / Hold
	Rec Mode	+  Shift + Rec / Rec Mode
	Timer	Sleep / Timer
	Rec	Rec / Rec Mode
	0	0
	Audio	Audio / Lang I/II
	1	1
	2	2
	3	3

 


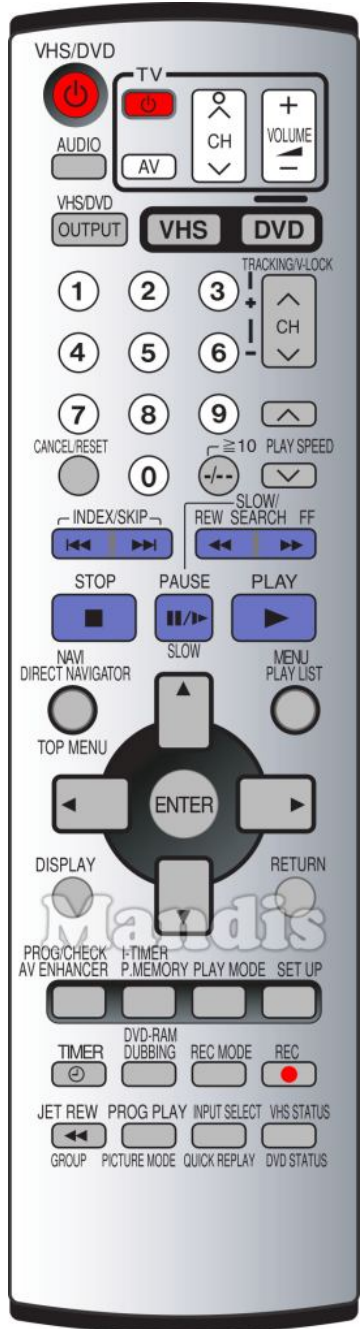





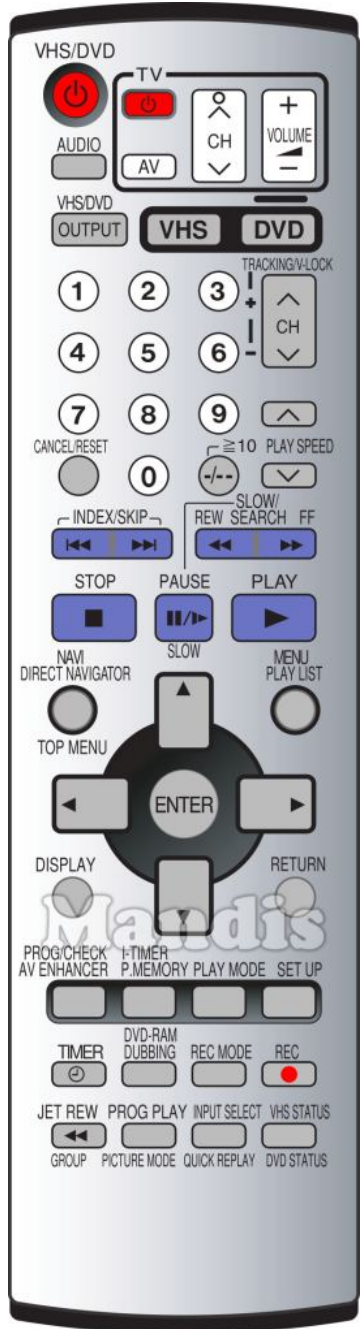

	Original	Substitut		Original	Substitut
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Input Select		AV / Input / RDS		
	REW		<< / Tune-		

	Original	Substitut





Original	Substitut	Original	Substitut
Power		Power	
AV		AV / Input / RDS	
Volume+		Vol+	
Volume-		Vol-	
CH+		CH+ / Page+	
CH-		CH- / Page-	

