

 

 

 

 



 

 

 

 

 

 

 

 

 

 

 




 

 
 

 

 




Original	Substitut
 Power	 Power
 Tv/Radio	 TV/Radio /
 Blank	 Sleep / Timer
 T.Opt.	 Sound / Title
 Text	 Text / Goto
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List

Original	Substitut
 Q.View	 Picture / Format
 FAV	 Fav / Marker / PC
 3D	 Zoom / Size
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Page+	 CH+ / Page+
 Page-	 CH- / Page-
 L/R	 Audio / Lang I/II
 Info	 Info / Angle
 Still	 Menu / Home
 Settings	 Setup / OPT /
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right





Original		Substitut		Original		Substitut	
	OK		OK				
	Back		Back / Return				
	Exit		Exit / Cancel / Clear				
	Subtitle		Subtitle / EQ				
	Guide		Guide / EPG / -/--				
	Stop		Stop / Hold				
	<<		<< / Tune-				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	>>		>> / Tune+				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

