



Original	Substitut
Power Audio	Power
Tv Direct	Shift + 0
Power DVR/DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power STB	Yellow / YouTube / Repeat
Power Tv	Blue / Prime Video / Random
DVR/DVD	Fav / Marker / PC
VCR	Shift + 4
Video	Shift + 5
TV	Shift + 1
DVD Multi	Guide / EPG / -/--
FM/AM	Shift + 6
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Channel+	Shift + Audio / Lang I/II

Original	Substitut
Channel-	Shift + Setup / OPT / Tools
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
<<	<< / Tune-
Stop/Memory	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
Smart Surround Setup	Sound / Title
On	Picture / Format
Up/TA/News/Inf	Up
Down/PTY	Down
Right/PTY+	Right





Original	Substitut
Left/PTY-	Left
Enter	OK
fsIRate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
SetUp	Setup / OPT /
DVD/HDD/Title/Gr	+  Shift + 2
Zoom/→	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Substitut
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
Ex/Es/Return	+  Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
Rec Pause	+  Shift + Pause / Step /
Surround	Eject / Surround
Display/Dimmer	Display / Media
Input Analog/Digital	AV / Input / RDS
L-Front+/Thumbn	+  Shift + Up
L-Front-	+  Shift + Down
Front-R+/Slide	+  Shift + Right
Front-R-	+  Shift + Left
Center+/3D/S	CH+ / Page+
Center-	CH- / Page-
Page+/Subwfr+	+  Shift + CH+ / Page+

Page+





Original	Substitut
 Page-/Subwfr-	 +  Shift + CH- /
 Test Tone	 Text / Goto
 Sleep	 Sleep / Timer
 L-Surr+	 +  Shift + Smart / List
 L-Surr-	 +  Shift + Display / Media
 Surr-R+	 +  Shift + TV/Radio / Program
 Surr-R-	 +  Shift + AV / Input / RDS
 S.Back+	 +  Shift + Picture / Format
 S.Back-	 +  Shift + D.Menu / Top Menu

Original	Substitut





Original	Substitut
Power DVD	Power
Power Audio	Shift + Power
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
On Screen	Picture / Format
Up	Up
Down	Down

Original	Substitut
Right	Right
Left	Left
Enter	OK
fs/Rate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Set Up	Setup / OPT /
DVD/HDD/Title/Gr	Blue / Prime Video / Random
Zoom/→	Zoom / Size
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
EX/Es/Return	Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
1	1
2	2
3	3






Original	Substitut	Original	Substitut
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	Surround		Eject / Surround
	Display/Dimmer		Display / Media
	Input Analog/Digital		AV / Input / RDS
	Thumbnail		Yellow / YouTube / Repeat
	Slide		Text / Goto
	3D/S Effect		Sound / Title
	Page+		CH+ / Page+














Original	Substitut
 Power Audio	 Power
 FM/AM	 TV/Radio /
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 I<</Tuning-	 I<< / Preset-
 Play/FM Mode	 Play / Slow
 >>I/Tuning+	 >>I / Preset+
 Stop/Memory	 Stop / Hold
 Up/TA7News/Inf	 Up
 Down/PTY	 Down
 Right/PTY+	 Right
 Left/PTY-	 Left
 On	 Picture / Format
 Smart Surround Setup	 Smart / List
 1 FM/AM	 1
 2 FM/AM	 2

Original	Substitut
 3 FM/AM	 3
 4 FM/AM	 4
 5 FM/AM	 5
 6 FM/AM	 6
 7 FM/AM	 7
 8 FM/AM	 8
 9 FM/AM	 9
 10 FM/AM	 0
 +10 FM/AM	 Fav / Marker / PC
 EX/ES/Return	 Back / Return
 Display/Dimmer	 Display / Media
 Decode	 Shift + 2
 EQ Freq	 Shift + 3
 Bass Boost	 Shift + 4
 C.Tone	 Shift + 5
 EQ Level+	 Shift + 6
 Midnight	 Shift + 7





Original	Substitut	Original	Substitut
	 +  Shift + 8		
	 +  Shift + 9		
	 +  Shift + 0		

