



Original	Substitut	Original	Substitut
	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	<<		<< / Tune-
	>>		>> / Tune+
	<<		<< / Preset-
	>>		>>  / Preset+

Original	Substitut	Original	Substitut
	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	DVD Menu		D.Menu / Top
	Title		Sound / Title
	Up		Up
	Enter		OK
	Down		Down
	Right		Right
	Left		Left
	Return		Back / Return
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	Marker		Fav / Marker / PC



