


 



 


























Original	Substitut	Original	Substitut
	Power		Power
	Open/Close		Eject / Surround
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit / Cancel / Clear
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+

Original	Substitut	Original	Substitut
	Play		Play / Slow
	Pause/Step		Pause / Step / Freeze
	Stop		Stop / Hold
	DVD Menu		D.Menu / Top
	Title		Sound / Title
	Up		Up
	Enter		OK
	Down		Down
	Right		Right
	Left		Left
	Return		Back / Return
	Display		Display / Media
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Setup		Setup / OPT /
	Marker		Fav / Marker / PC





	Original	Substitut		Original	Substitut
	Search	 Red / Netflix / Search			
	Program	 Shift + TV/Radio / Program			
	Zoom	 Zoom / Size			
	Repeat	 Green / APP / Repeat			
	A-B	 Yellow / YouTube / Repeat			
	Resolution	 TV/Radio /			
	Karaoke ECHO	 Blue / Prime Video / Random			
	Power Tv	 Shift + Power			
	AV Tv	 AV / Input / RDS			
	PR/CH+ Tv	 CH+ / Page+			
	PR/CH- Tv	 CH- / Page-			
	Vol+ Tv	 Vol+			
	Vol- Tv	 Vol-			

	Original	Substitut

