
 














| Original | Substitut |
|---------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  ambilight |  Display / Media |
|  Menu |  Menu / Home |
|  Smart |  Smart / List |
|  Sources/Pair |  AV / Input / RDS |
|  Up |  Up |
|  Down |  Down |
|  Left |  Left |
|  Right |  Right |
|  OK |  OK |
|  ← |  Back / Return |
|  Home |  Shift + Menu / |
|  Tv Guide/List |  Guide / EPG / -/-- |
|  << |  << / Tune- |
|  Play |  Play / Slow |
|  >> |  >> / Tune+ |
|  Stop |  Stop / Hold |

| Original | Substitut |
|-------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
|  Pause |  Pause / Step / Freeze |
|  Rec |  Rec / Rec Mode |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |
|  Netflix |  Shift + Red / Netflix / |
|  prime video |  Shift + Blue / Prime / |
|  Rakuten Tv |  Shift + Green / APP / |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Mute |  Mute / Dimmer |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  Exit/Tv |  Exit / Cancel / Clear |
|  1 |  1 |
|  2 |  2 |



