





Original	Substitut
Power TV	Power
1 CD	Shift + 1
1	1
2 CD	Shift + 2
2	2
3	3
3 CD	Shift + 3
4	4
4 CD	Shift + 4
5	5
5 CD	Shift + 5
6	6
6 CD	Shift + 6
7 CD	Shift + 7
7	7
8 CD	Shift + 8
8	8

Original	Substitut
9	9
9 CD	Shift + 9
0 CD	Shift + 0
0	0
10	Shift + Fav / Marker / PC
10 CD	Guide / EPG / -/--
+10	Shift + Guide / EPG / -/--
+10 CD	Fav / Marker / PC
Tv/Video	TV/Radio /
CD	Smart / List
Tv Vol+	Vol+
Tv Vol-	Vol-
Muting	Mute / Dimmer
Pause CD	Pause / Step / Freeze
<</I<< CD	<< / Tune-
Play CD	Play / Slow
Stop CD	Stop / Hold












































 
Original	Substitut
 >>/>>I CD	 >> / Tune+

Original	Substitut





Original	Substitut
 Power DVD	 Power
 Test	 1
 Subwoofer-	 Shift + Vol-
 Subwoofer+	 Shift + Vol+
 Effect	 4
 Center-	 5
 Menu	 Menu / Home
 Center+	 6
 Bass/Boost	 7
 Enter	 OK
 Rear L-	 8
 Rear L+	 9
 Rear R-	 0
 Rear R+	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Surround	 Eject / Surround
 DSP Mode	 Setup / OPT /

Original	Substitut
 Tv/Video	 TV/Radio /
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 Pause	 Pause / Step / Freeze
 TV/VCR CH+	 CH+ / Page+
 TV/VCR CH-	 CH- / Page-
 Left	 Left
 <</><<	 << / Tune-
 Play	 Play / Slow
 Up	 Up
 Stop	 Stop / Hold
 Down	 Down
 Right	 Right
 >>/>>	 >> / Tune+







 

































Original		Substitut	
	Power VCR		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Input A/D		AV / Input / RDS
	TV/Video		TV/Radio /
	Pause		Pause / Step / Freeze
	TV/VCR CH+		CH+ / Page+
	TV/VCR CH-		CH- / Page-
	<<		<< / Tune-

Original		Substitut	
	Play		Play / Slow
	Stop		Stop / Hold
	>>		>> / Tune+





Original	Substitut
 Power Audio	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 10	 Guide / EPG / -/--
 +10	 Fav / Marker / PC
 AM	 Red / Netflix / Search
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 TV/VCR CH+	 CH+ / Page+

Original	Substitut
 TV/VCR CH-	 CH- / Page-

