



 
 
 

 

 
 



 











 



 

 

 

 

 

 

 









Original	Substitut
 Power	 Power
 Mute	 Mute / Dimmer
 DTV	 Smart / List
 Radio	 TV/Radio /
 USB	 Shift + 8
 DVD	 Shift + 2
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide / EPG / -/--

Original	Substitut
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 FAV	 Fav / Marker / PC
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Source	 AV / Input / RDS
 Info	 Info / Angle
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK





Original	Substitut
Aspect	Shift + Picture / Format
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
Text Hold	Setup / OPT /
Zoom/Text/DVD	Zoom / Size
Power/Display	Display / Media
Rec	Rec / Rec Mode
DVD Menu	D.Menu / Top
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop/Eject	Stop / Hold
Rec List/DVD	Shift + Rec / Rec Mode
<< PVR/DVD	<< / Tune-
>> PVR/DVD	>> / Tune+
Play	Play / Slow

Original	Substitut
Pause	Pause / Step / Freeze
Red/Goto	Red / Netflix / Search
Green/A-B	Green / APP / Repeat
Yellow/Angle/3D	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

