

 

 

 

 
 


 







 



 









 

 

 







 

 



 



 







 







Original	Substitut	Original	Substitut
	Input		AV / Input / RDS
	Power		Power
	3D		Setup / OPT /
	Text		Text / Goto
	Subtitle		Subtitle / EQ
	O)/I/II		Audio / Lang I/II
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	AD		Sound / Title
	0		0
	ATV/DTV		Smart / List
	Vol+		Vol+
	[≡i]/[i+ ]		Info / Angle
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	P-		CH- / Page-
	Quick		Display / Media
	Guide		Guide / EPG / -/-
	Up		Up
	Exit		Exit / Cancel / Clear
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Return		Back / Return





Original	Substitut	Original	Substitut
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [≡?]	 Play / Slow		
 [≡□]	 Stop / Hold		
 [≡⇕]	 Zoom / Size		
 [⊖] / [≡X]	 Pause / Step / Freeze		

