



Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Movie-Music-Phot	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 */o..	 Setup / OPT /

Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Movie-Music-Phot	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 */o..	 Setup / OPT /





Original	Substitut	Original	Substitut
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG.	 LANG I/II AUDIO Audio / Lang I/II		
 [=]..	 EQ SUBTITLE Subtitle / EQ		
 [-o-]	 SIZE ZOOM Zoom / Size		
 <<	 TUNE- << / Tune-		
	 STEP-FREEZE Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 .	 REC MODE Rec / Rec Mode		
 ▶	 SLOW ▶ Play / Slow		
 ■	 HOLD ■ Stop / Hold		

