



Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Movie-Music-Phot	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 */o..	 Setup / OPT /

Original	Substitut	Original	Substitut
 Power	 Power	 Vol-	 Vol-
 Source (Games)	 AV / Input / RDS	 World/Internet	 Smart / List
 1	 1	 PR-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 Q.Menu	 D.Menu / Top
 4	 4	 Up	 Up
 5	 5	 Left	 Left
 6	 6	 OK	 OK
 7	 7	 Right	 Right
 8	 8	 Down	 Down
 9	 9	 Back	 Back / Return
 TV	 TV/Radio /	 Exit	 Exit / Cancel / Clear
 0	 0	 i	 Info / Angle
 Recall	 Fav / Marker / PC	 Movie-Music-Phot	 Display / Media
 Vol+	 Vol+	 Guide	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 */o	 Picture / Format
 PR+	 CH+ / Page+	 */o..	 Setup / OPT /





Original	Substitut	Original	Substitut
[≡]/Text	Text / Goto		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Audio / Lang I/II		
[≡]..	Subtitle / EQ		
[-o-]	Zoom / Size		
<<	<< / Tune-		
Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Rec	Rec / Rec Mode		
Play	Play / Slow		
Stop	Stop / Hold		

